 


Lunacy Sliding Door Pull

D3 $\frac{7}{32}$ x P $\frac{3}{32}$ " | D82 x P2.5mm

Install Instructions

Bankston
YSG

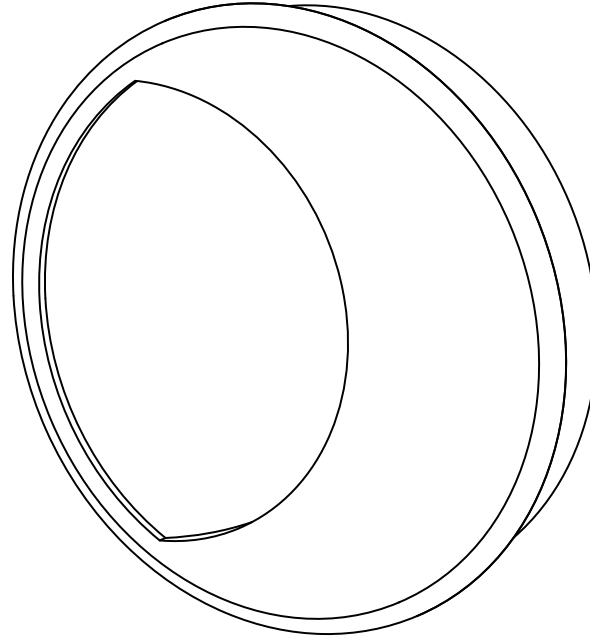

Finishes &
Materials



FAQs &
Warranty



Resources

bankston.com

@bankston_architectural



Bankston Australia
14-16 Stepney Street
Stepney, South Australia 5069

P. +61 (0)8 8362 1133
E. info@bankstonarchitectural.com.au

Bankston New Zealand
P. +64 (0)6 359 0008
E. info@bankstonarchitectural.co.nz

Bankston International
E. info@bankston.com

**SDG Trading Pty Ltd trading
as Bankston Architectural**

ACN 008 154 041
ABN 18 008 154 041

*Image used for illustration
purposes only




Please recycle
me after use



COMP459


1. Mark up the door at your desired location, noting the overall diameter of the flush pull is D82mm or D3 7/32".
2. Using a 76mm or 3" hole saw, cut into the door to a depth of 13mm or 1/2".
3. Carefully chisel out the internal of the hole until level.
4. Gently sand back the edges of the hole to allow for the flush pull lip. Figure 1.

 Figure 1.

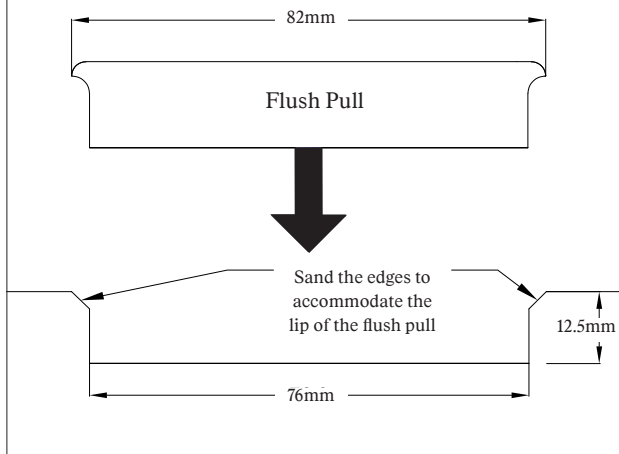

5. Apply your preferred adhesive in the hole and gently push the flush pull in, being careful not to over apply the adhesive. Position the flush pull so that its fitted in the direction the door will slide to open. Figure 2.

 Figure 2.

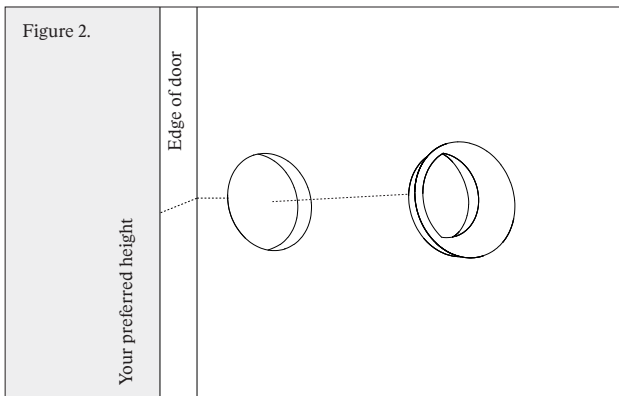

6. If installing back-to-back (two flush pull required) repeat steps 1-5.

Included

Flush pull x 1

