



## **ENTRANCE HANDLE** COLLECTION

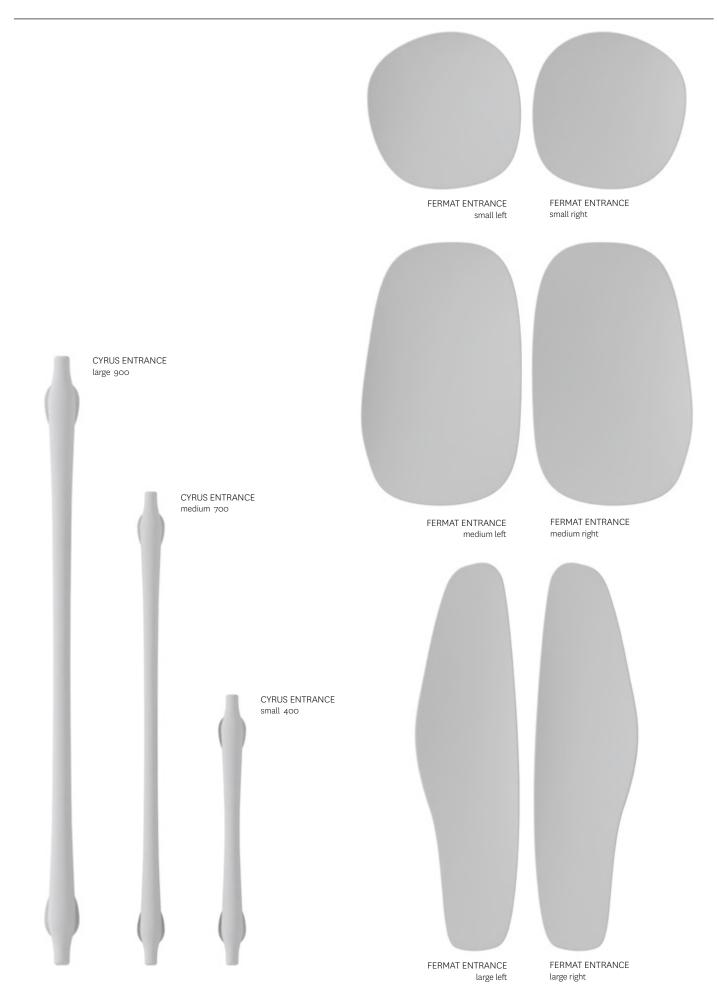

## JOINERY HANDLE COLLECTION

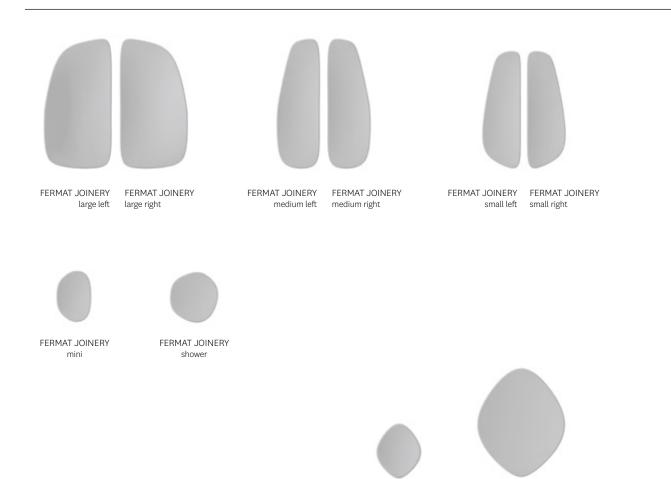

MESSINA JOINERY small

MESSINA JOINERY medium


## WALL HOOK COLLECTION






MESSINA WALL HOOK


PESCARA WALL HOOK

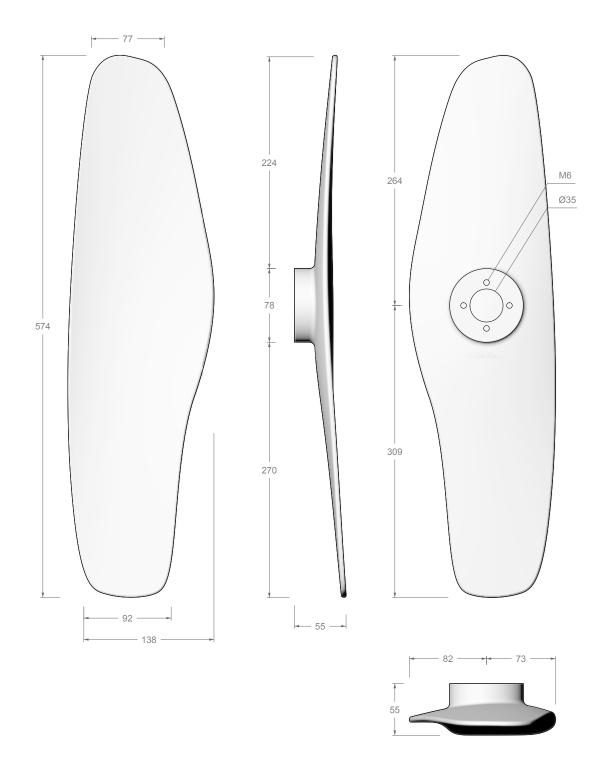


## **FERMAT ENTRANCE** DOOR - HOLE SPACING

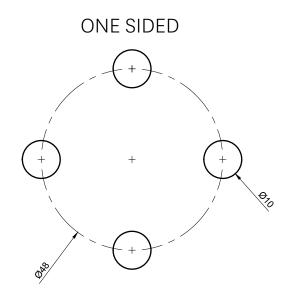

If handle is mounted on only one side, drill four 10mm holes.

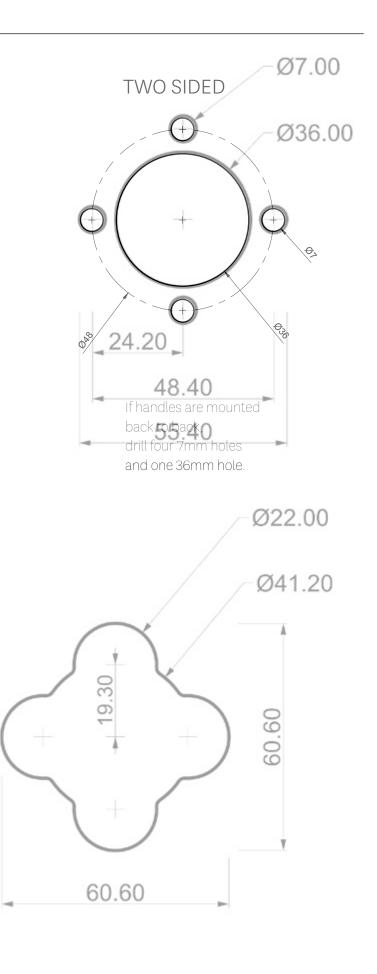


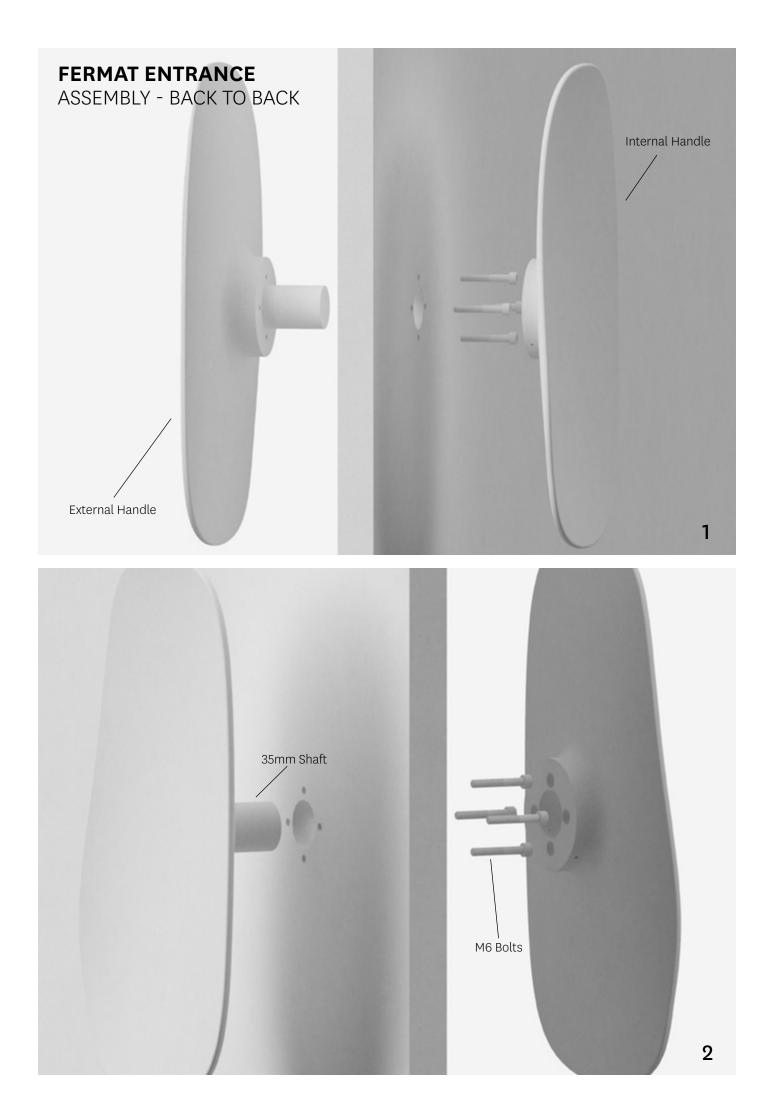





### STEPS:

- 1. DRILL 4 x 7mm HOLES INTO DOOR
- 2. DRILL HOLE FOR 35mm SHAFT (SIZE WILL DEPEND ON DOOR MATERIAL)
- 3. INSERT EXTERNAL HANDLE THROUGH DOOR
- 4. TIGHTEN 4 x M6 BOLTS
- 5. APPLY RETAINING COMPOUND TO SHAFT
- 6. SLIDE INTERNAL HANDLE OVER SHAFT
- 7. INSERT BOTH GRUB SCREWS AND TIGHTEN WITH ALLEN KEY

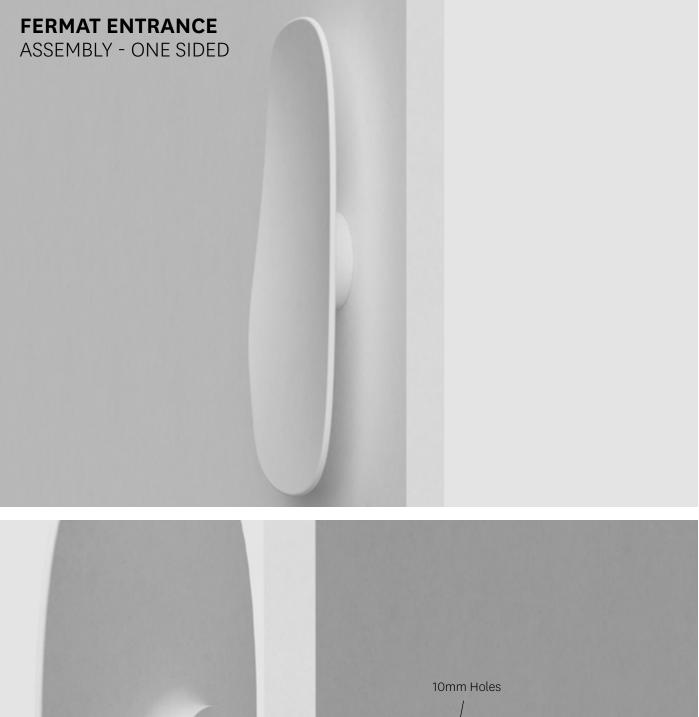

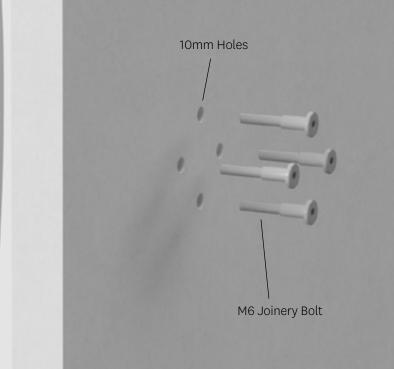

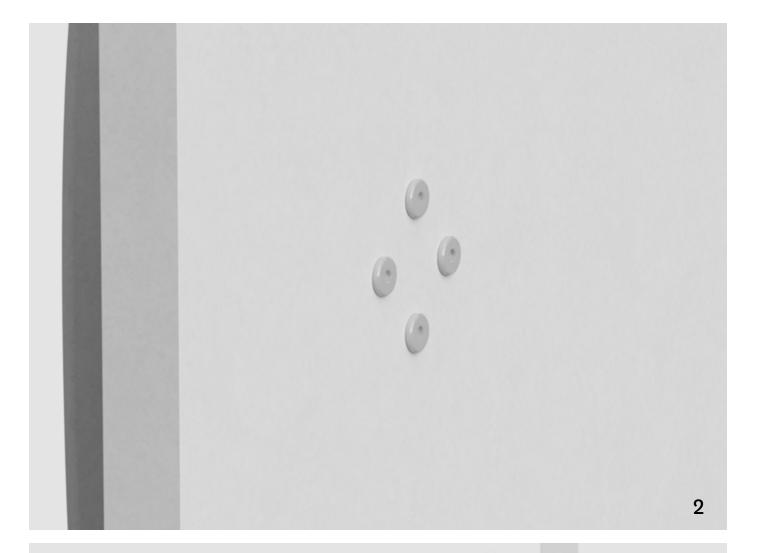

#### STEPS:

DRILL 4 x 10mm HOLES INTO DOOR
INSERT JOINERY BOLTS

#### **BARBERA studio & showroom**

By appointment: 5/213 Sunshine Road Tottenham 3012 VIC Australia

+61 3 9314 4273 info@barberadesign.com www.barberadesign.com

Exclusively sold within Victoria Australia GET SPECIFIED Dan Robertshaw 0488116949 helpme@getspecified.com.au

# BARBERA.