


# **ENTRANCE HANDLE**

## COLLECTION

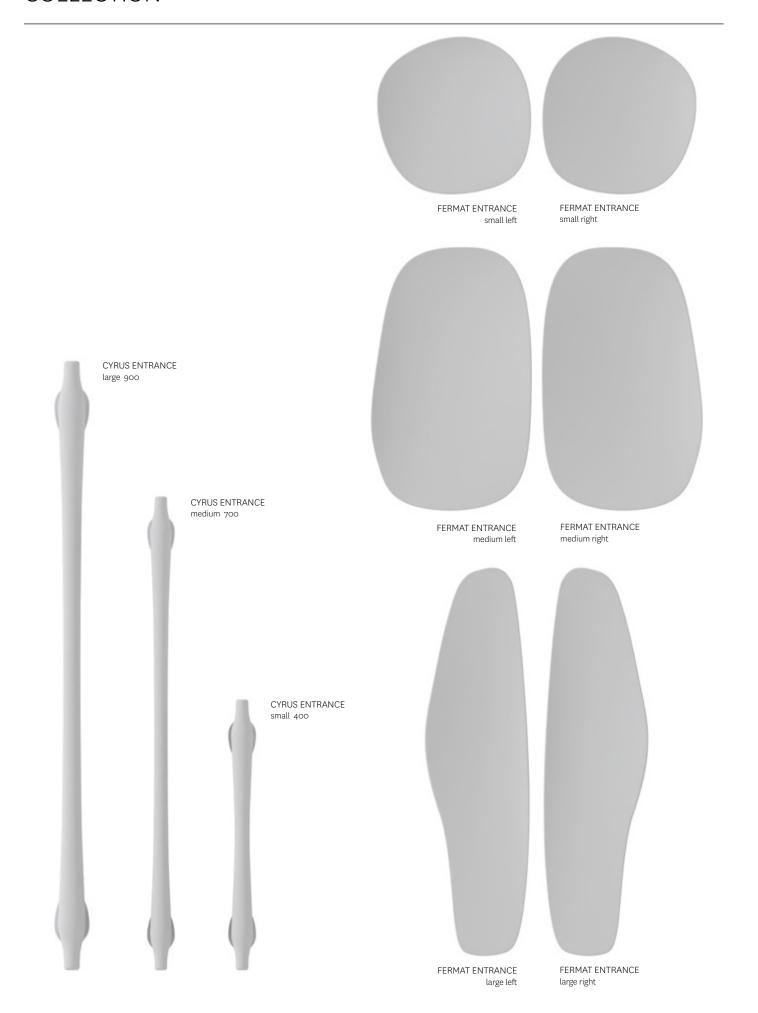

# **JOINERY HANDLE**

## COLLECTION



FERMAT JOINERY large left

FERMAT JOINERY large right



FERMAT JOINERY medium left



FERMAT JOINERY medium right



FERMAT JOINERY FERMAT JOINERY small left small right



FERMAT JOINERY mini



FERMAT JOINERY shower



MESSINA JOINERY small



MESSINA JOINERY medium


## **WALL HOOK** COLLECTION



MESSINA WALL HOOK




PESCARA WALL HOOK

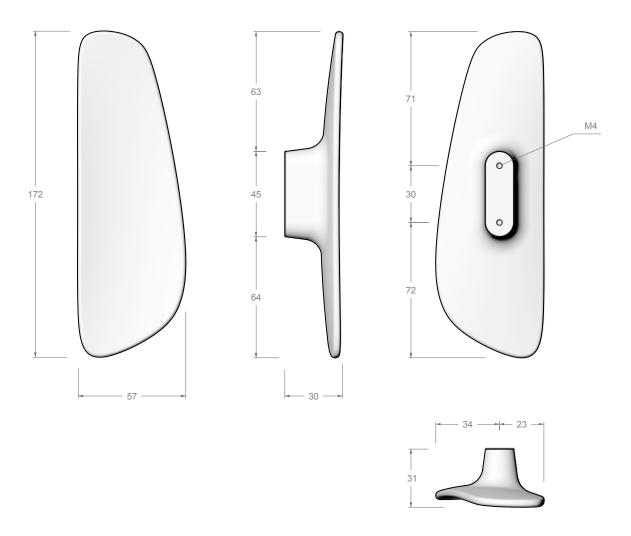

### **FERMAT JOINERY**

### JOINERY - HOLE SPACING

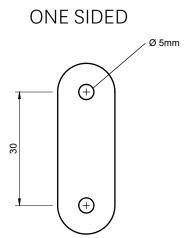


TWO SIDED


### OF SIDED


### O

If handle is mounted on only one side, drill two holes.


If handles are mounted back to back, drill three holes.

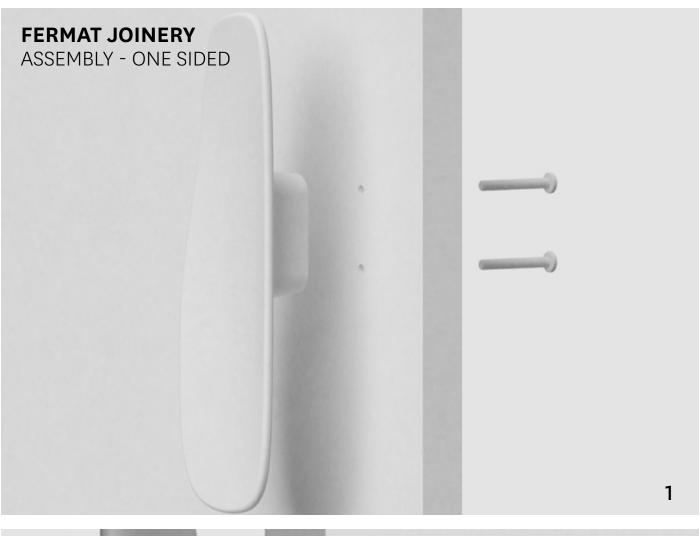


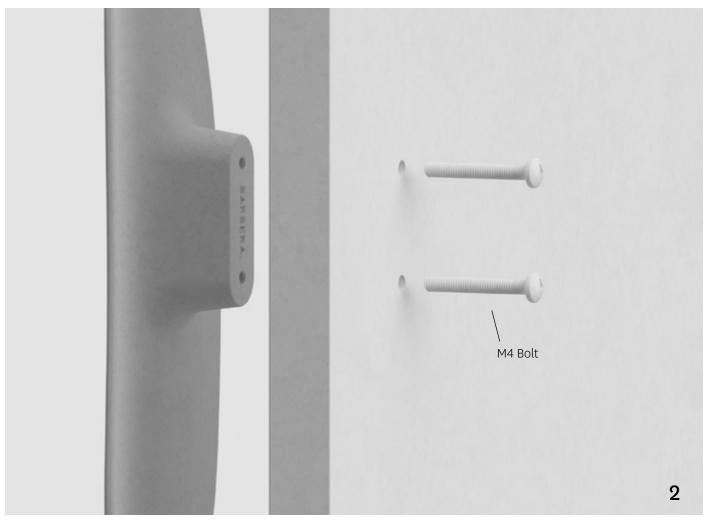


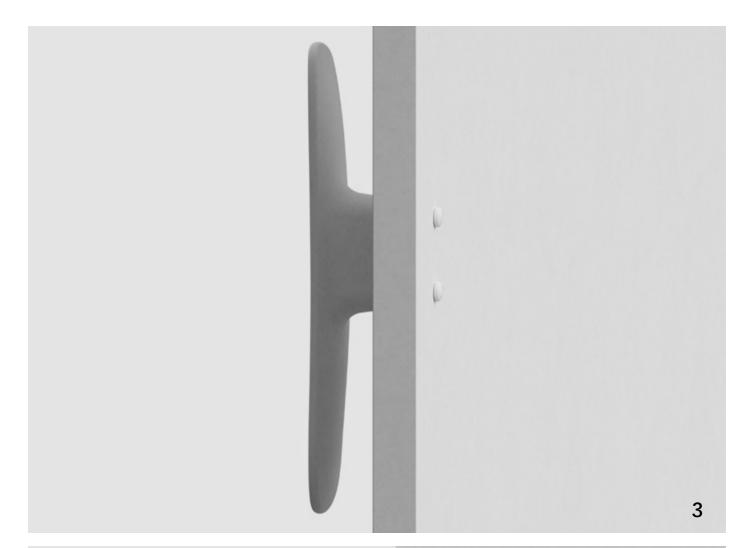


# STEPS: 1. DRILL 2×5mm HOLES INTO DOOR 2. INSERT BOLTS THROUGH DOOR 3. TIGHTEN HANDLE TO DOOR WITH SCREW DRIVER

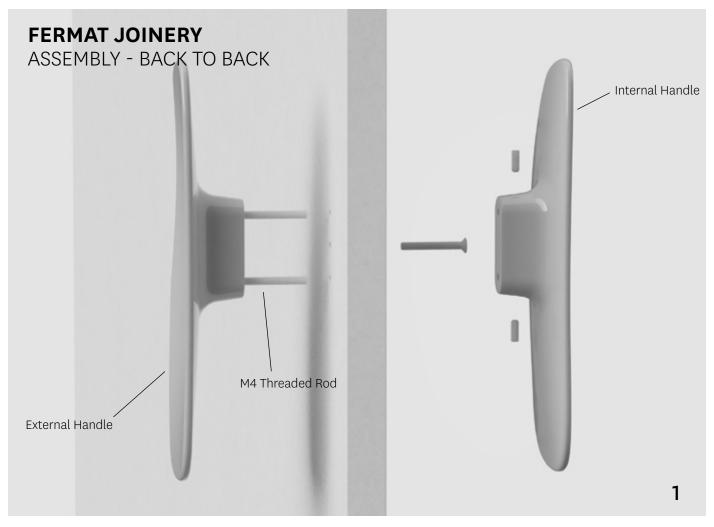

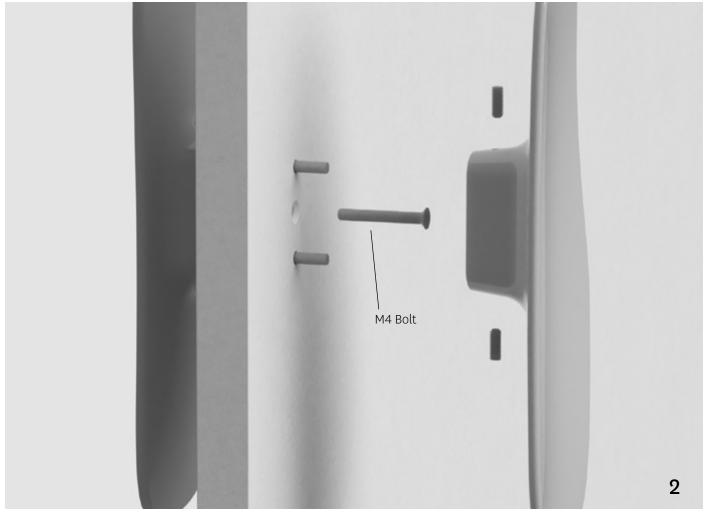

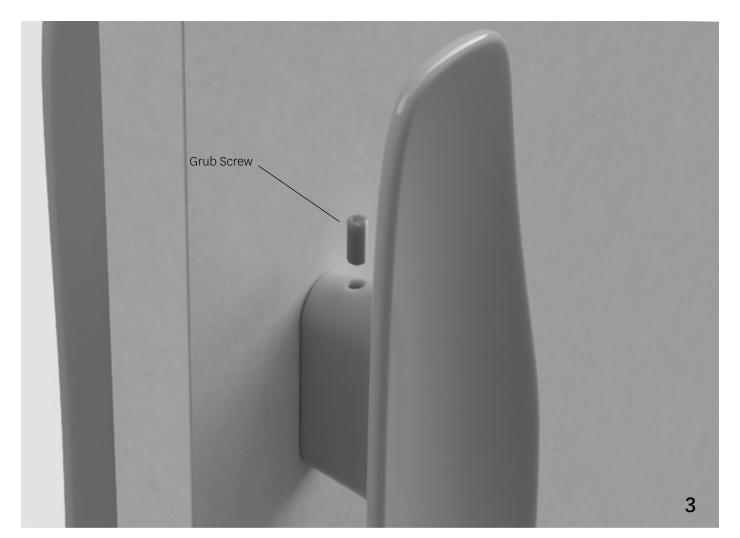

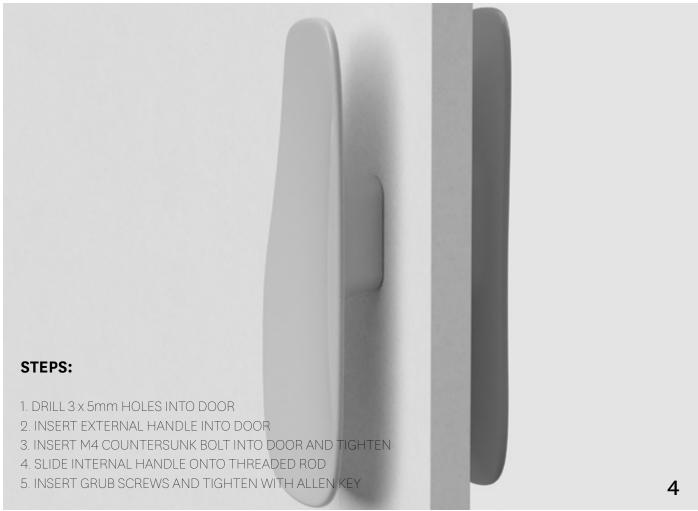

### **BARBERA studio & showroom**

By appointment: 5/213 Sunshine Road Tottenham 3012 VIC Australia

+61 3 9314 4273 info@barberadesign.com www.barberadesign.com

Exclusively sold within Victoria Australia GET SPECIFIED Dan Robertshaw 0488116949 helpme@getspecified.com.au

