

HARDWARE
TECHNICAL GUIDE

BARBERA.

ENTRANCE HANDLE COLLECTION



CYRUS ENTRANCE
large 900



CYRUS ENTRANCE
medium 700



CYRUS ENTRANCE
small 400



FERMAT ENTRANCE
small left



FERMAT ENTRANCE
small right



FERMAT ENTRANCE
medium left



FERMAT ENTRANCE
medium right



FERMAT ENTRANCE
large left



FERMAT ENTRANCE
large right

JOINERY HANDLE COLLECTION



FERMAT JOINERY
large left FERMAT JOINERY
large right



FERMAT JOINERY
medium left FERMAT JOINERY
medium right



FERMAT JOINERY
small left FERMAT JOINERY
small right



FERMAT JOINERY
mini



FERMAT JOINERY
shower



MESSINA JOINERY
small



MESSINA JOINERY
medium

WALL HOOK COLLECTION







MESSINA WALL HOOK



PESCARA WALL HOOK


MESSINA

WALL HOOK

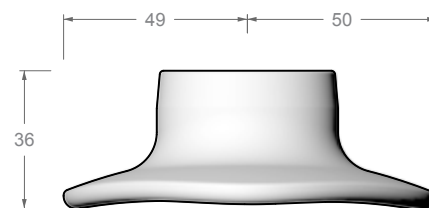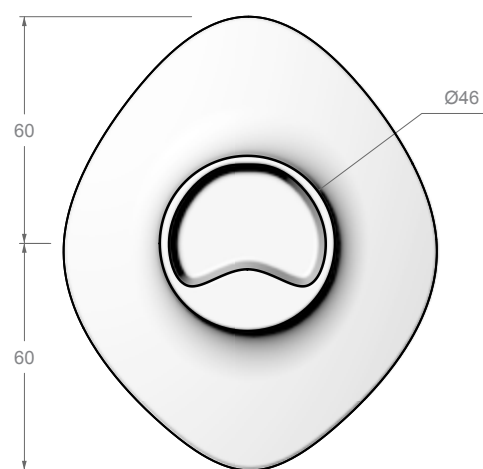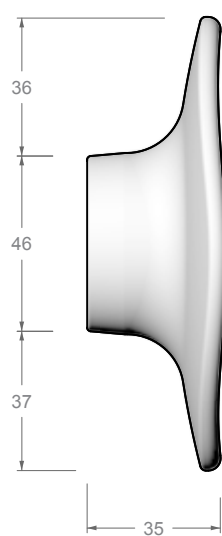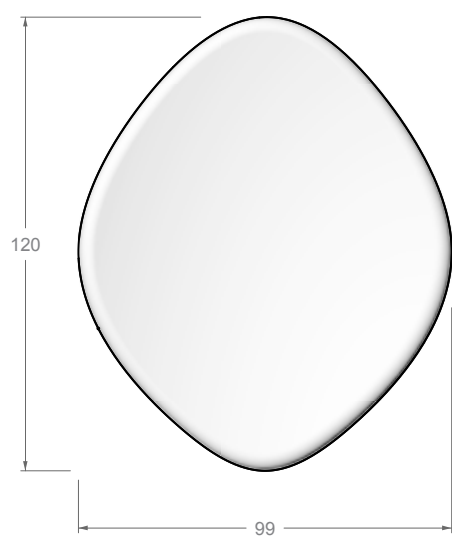


MESSINA WALL HOOK



ASSEMBLY

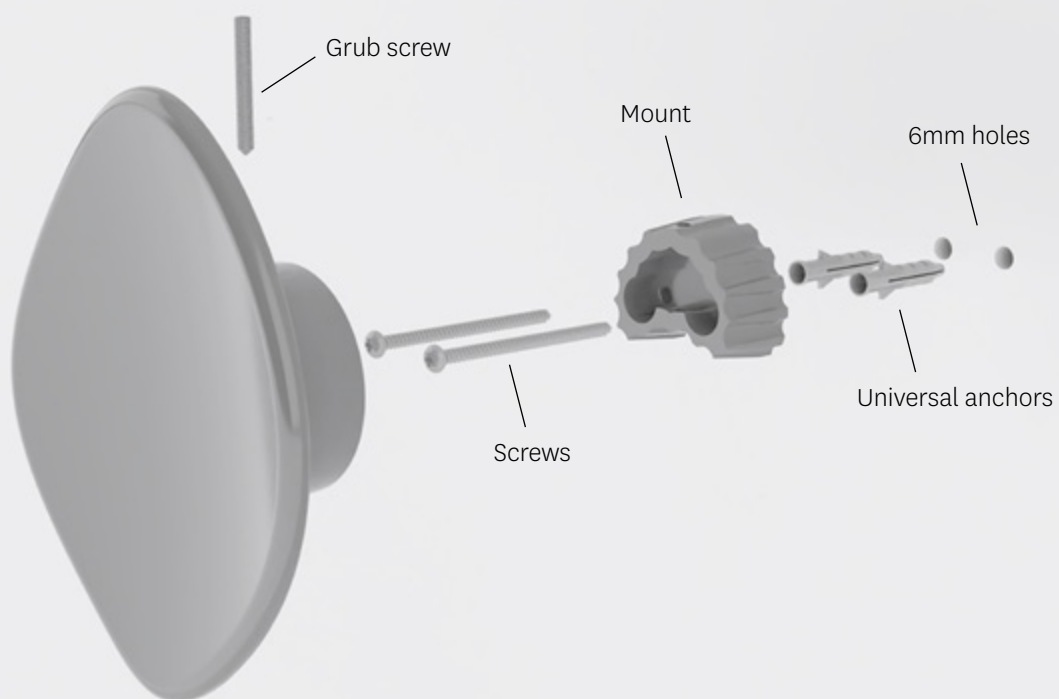

1

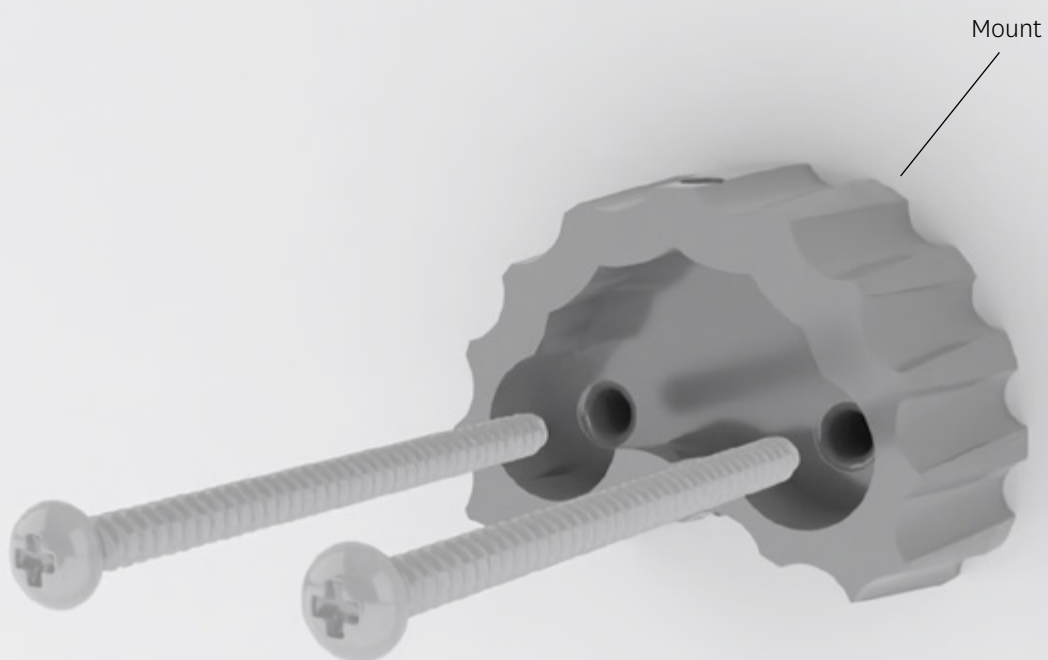

2

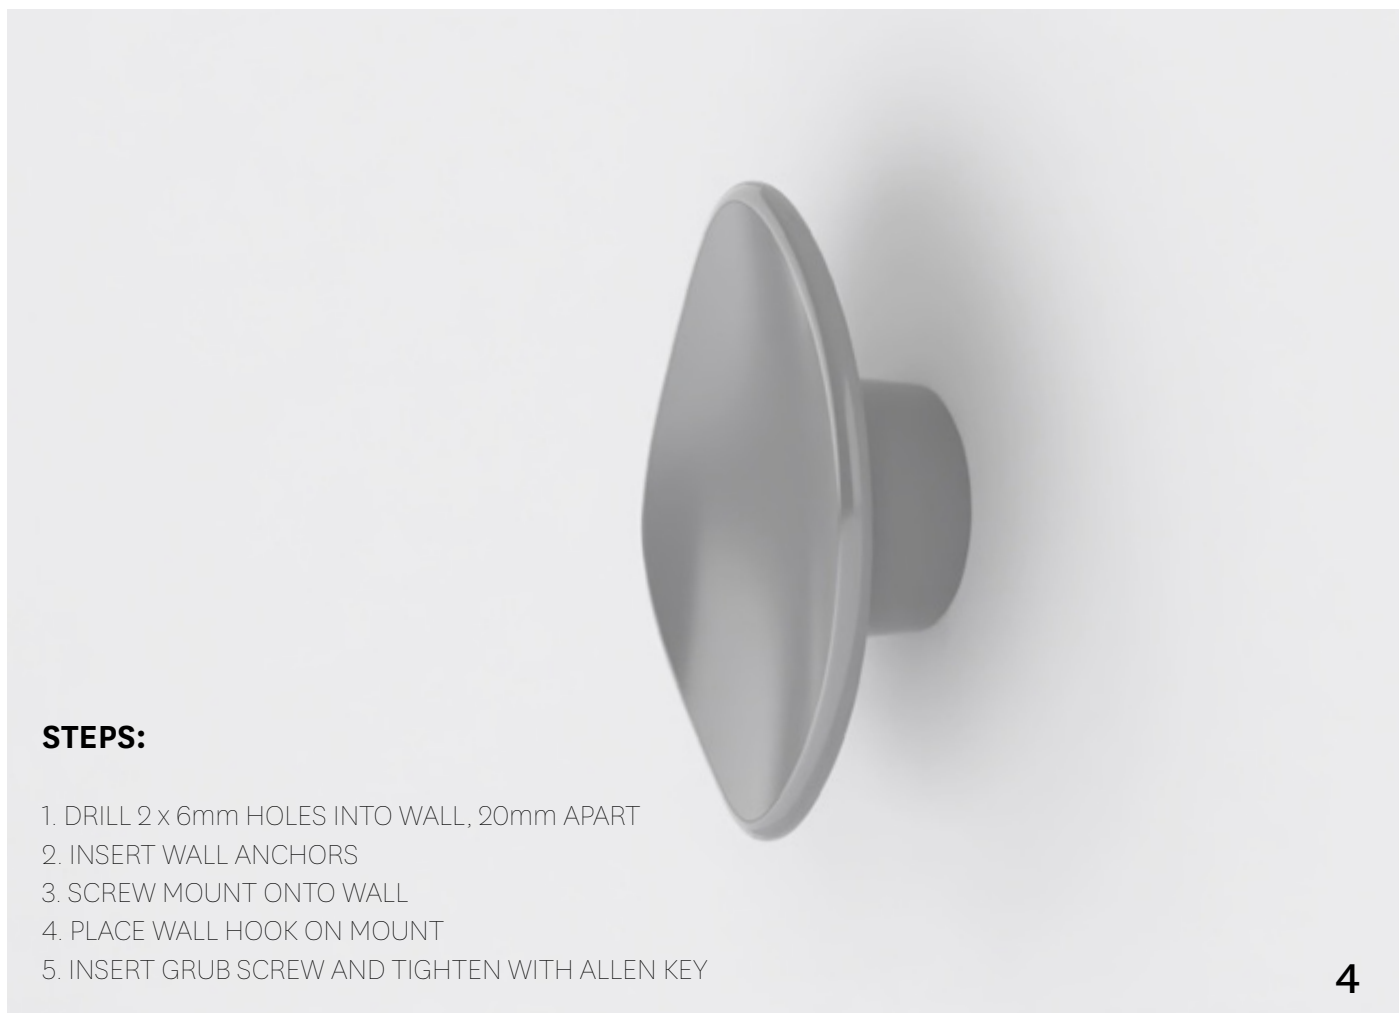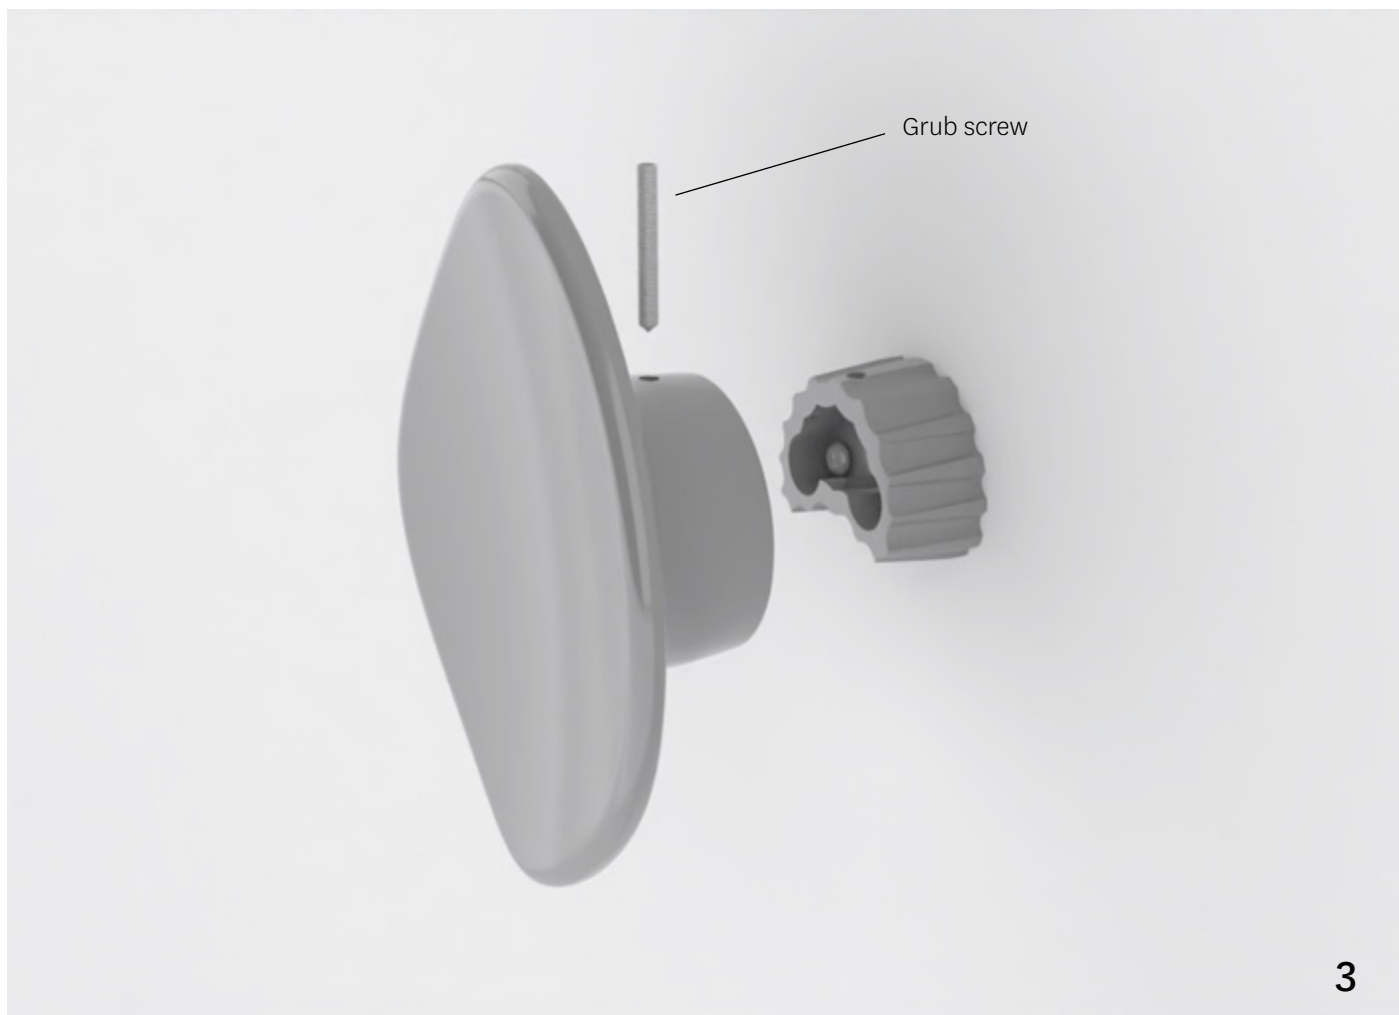

STEPS:

1. DRILL 2 x 6mm HOLES INTO WALL, 20mm APART
2. INSERT WALL ANCHORS
3. SCREW MOUNT ONTO WALL
4. PLACE WALL HOOK ON MOUNT
5. INSERT GRUB SCREW AND TIGHTEN WITH ALLEN KEY

BARBERA studio & showroom

By appointment:

**5/213 Sunshine Road
Tottenham 3012
VIC Australia**

+61 3 9314 4273

info@barberadesign.com

www.barberadesign.com

**Exclusively sold within Victoria
Australia**

GET SPECIFIED

Dan Robertshaw

0488116949

helpme@getspecified.com.au

BARBERA.