


Lever or Knob on Rose

Install Instructions

Sans-Arc

Bankston

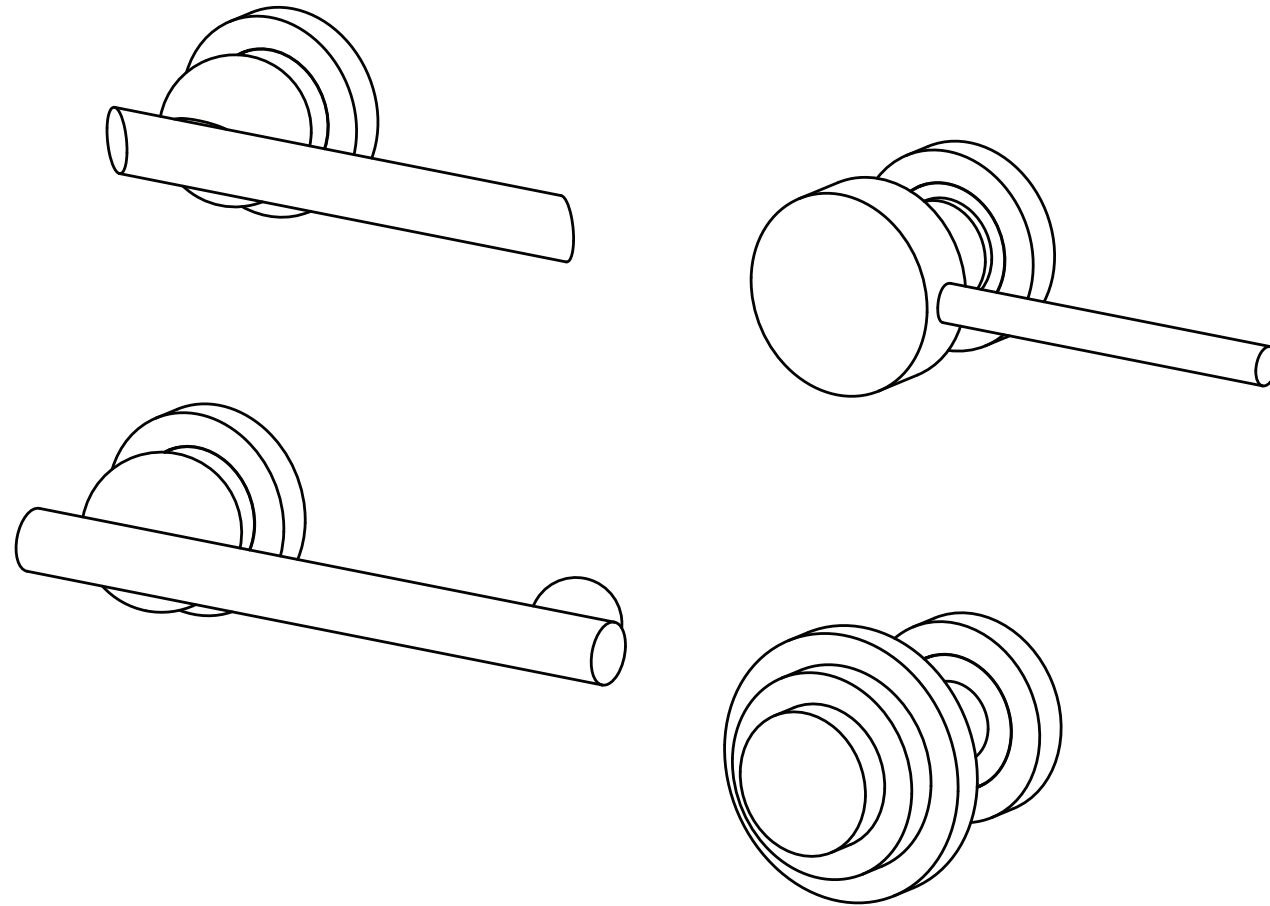

Finishes &
Materials



FAQs &
Warranty



Resources



Drill
Template

bankston.com

@bankston_architectural



Bankston Australia
14-16 Stepney Street
Stepney, South Australia 5069

P. +61 (0)8 8362 1133
E. info@bankstonarchitectural.com.au

Bankston New Zealand
P. +64 (0)6 359 0008
E. info@bankstonarchitectural.co.nz

Bankston International
E. info@bankston.com

**SDG Trading Pty Ltd trading
as Bankston Architectural**
ACN 008 154 041
ABN 18 008 154 041

COMP067V3




*Image used for illustration
purposes only





Please recycle
me after use

1. Unscrew the grub screws (D) from lever or knob (A).
2. Remove the lever or knob (A) from inner rose (C).
3. Unscrew the outer rose (B) from the inner rose (C).


Figure 1. * Image used for illustration purposes only.

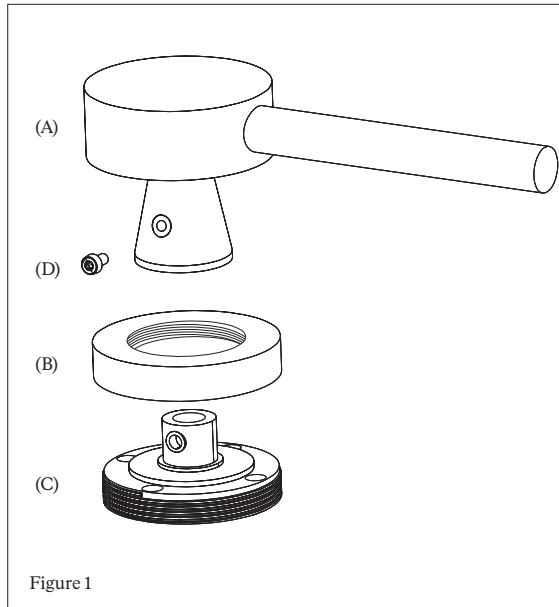


4. Install your latch, lock or privacy mechanism (sold separately). Refer supplier instructions.
5. Affix provided template to door and mark the pilot holes on both sides of the door. Figure 2 and 3.
6. Drill the pilot holes from both sides of the door if using wood screws (E).
7. Drill through holes from both sides of the door if using connector bolts (F).
8. Drill the centre spindle hole using a 22mm or 7/8" spade bit from both sides of the door.

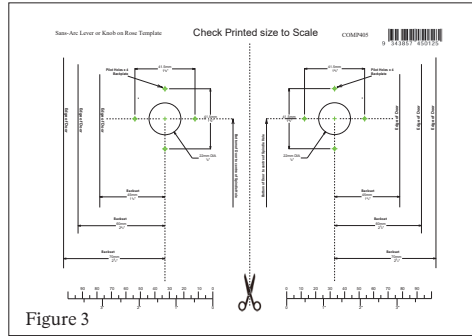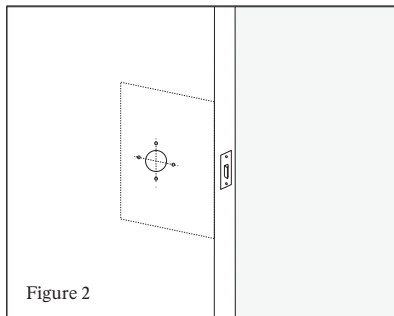



9. Place spindle (H) through the lock body from either side of the door. Ensure to cut your spindle to required length if needed.
We recommend using the standard spindle (H) in most applications. Split spindles (I) allow each lever or knob to retract independently and are supplied for use in the event that your latch is not operating smoothly as a result of misalignment during installation. Figure 4.

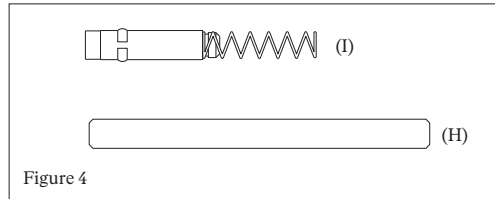


10. If using connector bolts (F), shorten to suit the door thickness ensuring they will not protrude from the opposite side of the rose once installed. Figure 5.

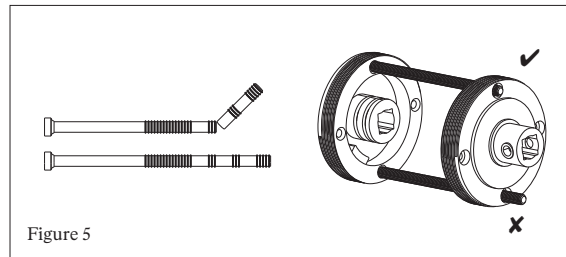


11. Place the inner rose (C) over the spindle on both sides of the door and fix with either wood screws (E) figure 6, or connector bolts (F) figure 7, ensuring the correct direction for functionality.

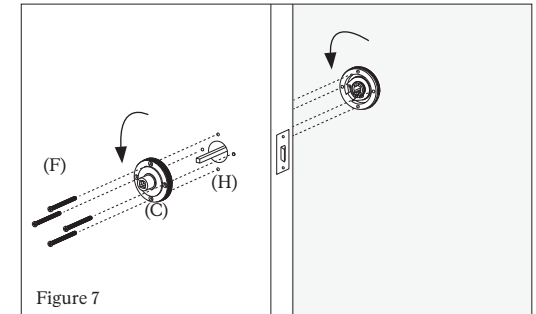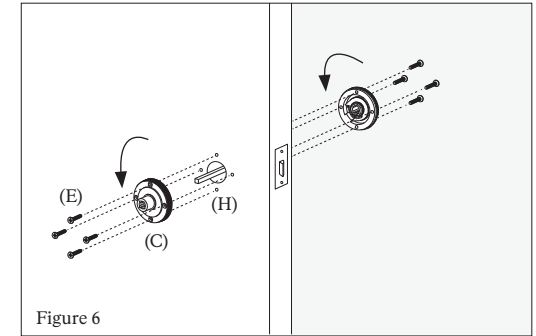

12. Screw the outer rose (B) onto the inner rose (C). Figure 8.

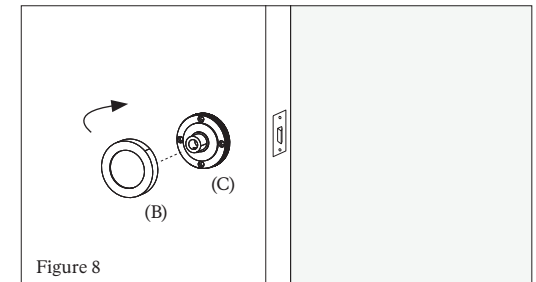


13. Place lever or knob (A) over the inner rose (C).
14. Attach the grub screws with loctite (J) using the Allen key (G) provided. Figure 9.

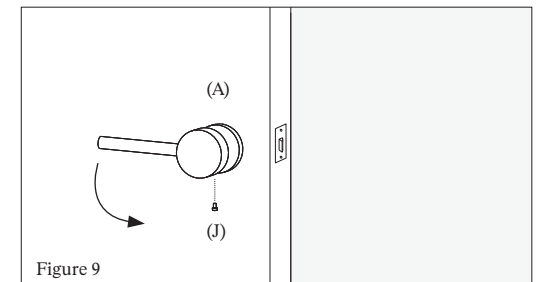

Included:

- Knob or lever x 2 (A)
- Outer rose x 2 (B)
- Inner rose x 2 (C)
- Grub screw x 2 (D)
- Wood screw L25mm x 9 (E)
- Connector bolts L65mm x 4 (F)
- Allen key 2.5mm x 1 (G)
- Spindle L100mm x 1 (H)
- Sprung spindle x 2 (I)
- Grub screws with Loctite x 2 (J)
- *Allen key x 1 (K)
- *Grub screw x 2 (L)

Spindle L150mm & connector bolts L100mm
are available upon request.

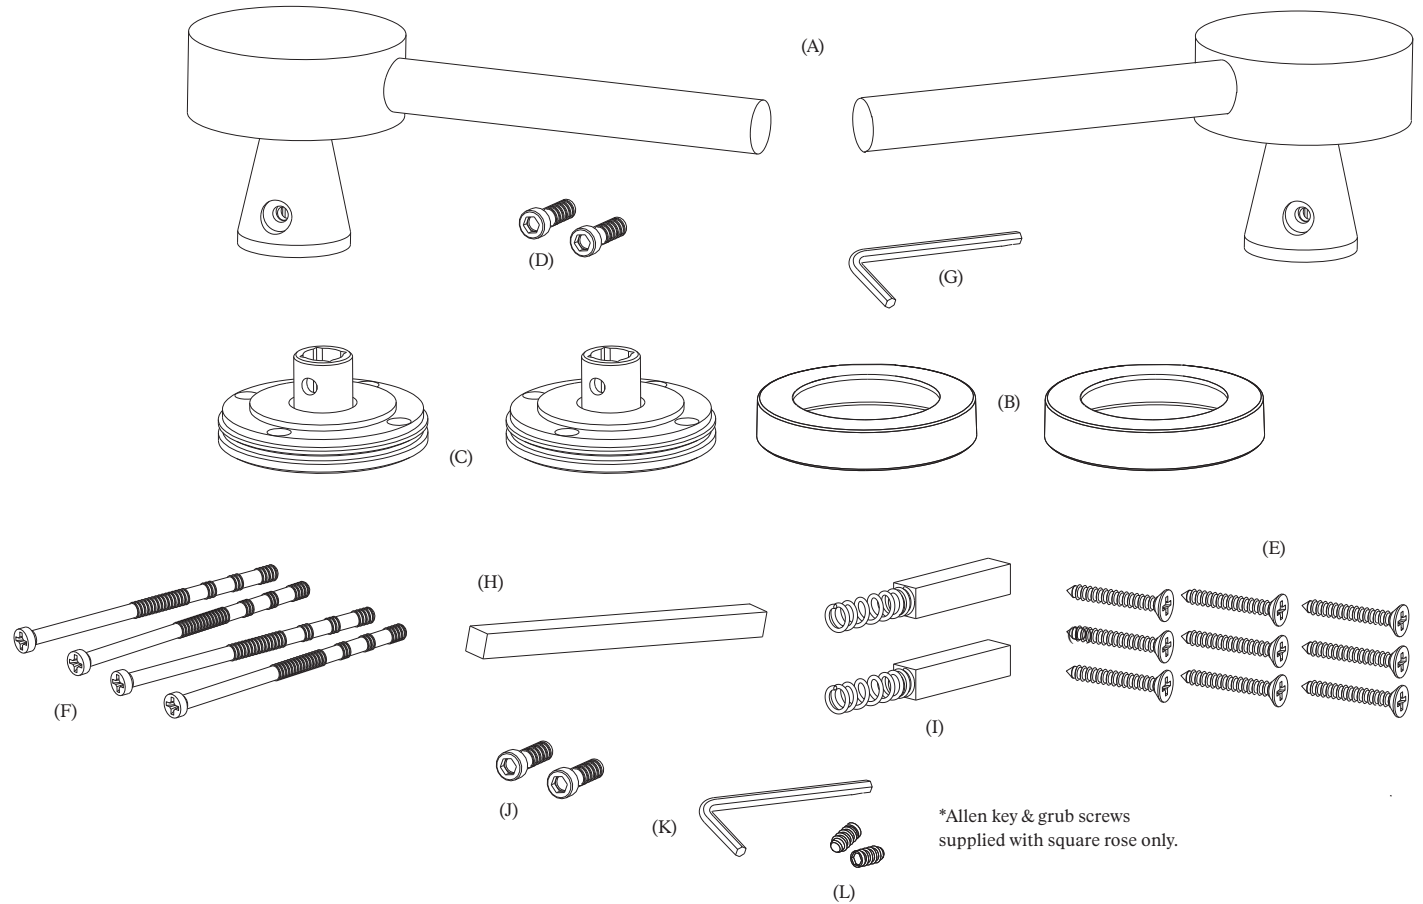

PLEASE NOTE:

Please note that screws require pre-drilling.
Please take extra care when fitting.

IMPORTANT:

Please install this hardware in the following order to ensure its
warranty is not voided.

1. Install the hardware on raw/unfinished door using the
instructions provided.
2. Remove hardware (where possible) and store safely. Do not place
tape onto the hardware as this will damage the finish.
3. Paint / finish door.
4. Reinstall hardware.