


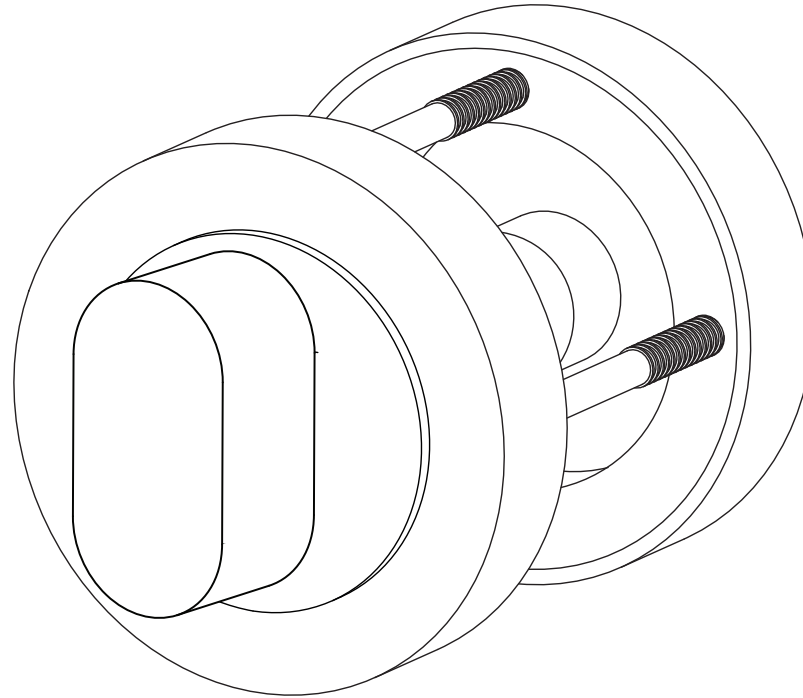

Finishes &
Materials



FAQs &
Warranty



Resources



Drill
Template

bankston.com

@bankston_architectural



Bankston Australia
14-16 Stepney Street
Stepney, South Australia 5069

P. +61 (0)8 8362 1133
E. info@bankstonarchitectural.com.au

Bankston New Zealand
P. +64 (0)6 359 0008
E. info@bankstonarchitectural.co.nz

Bankston International
E. info@bankston.com


**SDG Trading Pty Ltd trading
as Bankston Architectural**
ACN 008 154 041
ABN 18 008 154 041

*Image used for illustration
purposes only




Please recycle
me after use


1. Unscrew the outer rose (C) from inner rose privacy turn (B) & inner rose emergency release (A). Figure 1.

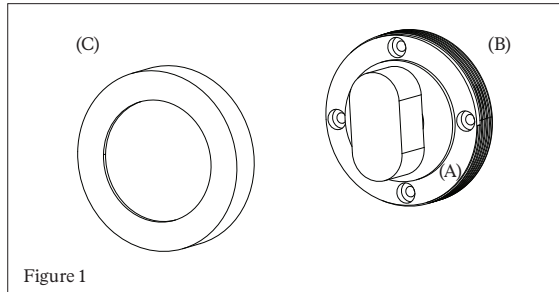


2. Install your privacy mechanism (sold separately). Refer supplier instructions.
3. Affix provided template to door and mark the pilot holes on both sides of the door. Figure 2.

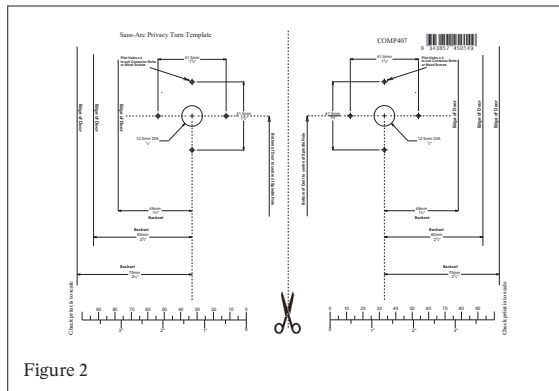


4. Drill the pilot holes from both sides of the door if using wood screws (F).
5. Drill through holes from both sides of the door if using connector bolts (E).
6. Drill the privacy spindle hole using a 12.5mm or 1/2 " spade bit from both sides of the door.
7. If using the wood screws (F) proceed to step 10.
8. If required, shorten connector bolts (E) to suit the door thickness. Figure 3.

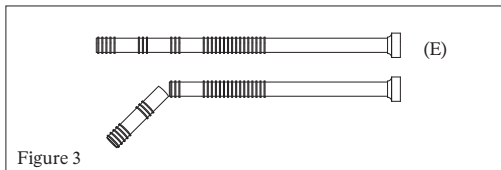

9. Ensure to cut so the connector bolt does not protrude from the opposite rose once installed. Figure 4.

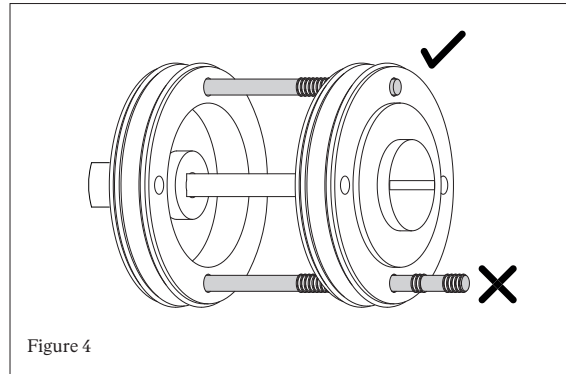


10. Place the spindle (D) through your privacy mechanism. *Ensure to cut the spindle to your required length if needed.
11. Ensure the privacy turn (B) and the emergency release (A) are positioned vertically to the door when placing on the spindle.
12. Insert two of the connector bolts (E) through the inner rose privacy turn (B) at 3 o'clock and 9 o'clock, screwing them into the opposite side inner rose emergency release (A). Repeat at 12 o'clock and 6 o'clock. Figure 5.
- OR
13. Affix with wood screws (F).
14. Screw on the outer roses (C) over the inner roses (A & B). Figure 5.

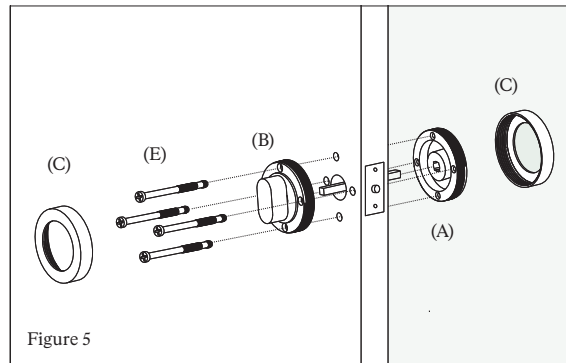

Included:

Inner rose emergency release x 1 (A)
 Inner rose privacy turn x 1 (B)
 Outer rose x 2 (C)
 Privacy spindle L75mm x 1 (D)
 Connector bolts L65mm x 4 (E)
 Wood screws L25mm x 9 (F)
 *Allen key x 1 (G)
 *Grub screw x 2 (H)

Connector bolts L100mm and spindle L150mm available upon request.

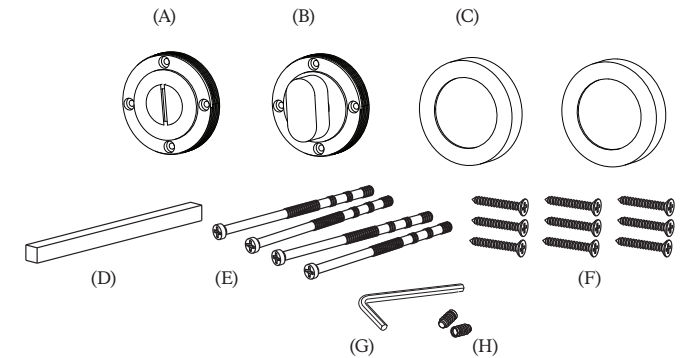

*Allen key & grub screws supplied with square rose only.

PLEASE NOTE:

Please note that screws require pre-drilling.
 Please take extra care when fitting.

IMPORTANT:

Please install this hardware in the following order to ensure its warranty is not voided.

1. Install the hardware on raw/unfinished door using the instructions provided.
2. Remove hardware (where possible) and store safely. Do not place tape onto the hardware as this will damage the finish.
3. Paint / finish door.
4. Reinstall hardware.