


H02 Knob on Rose

Install
Instructions

Civilian

Bankston

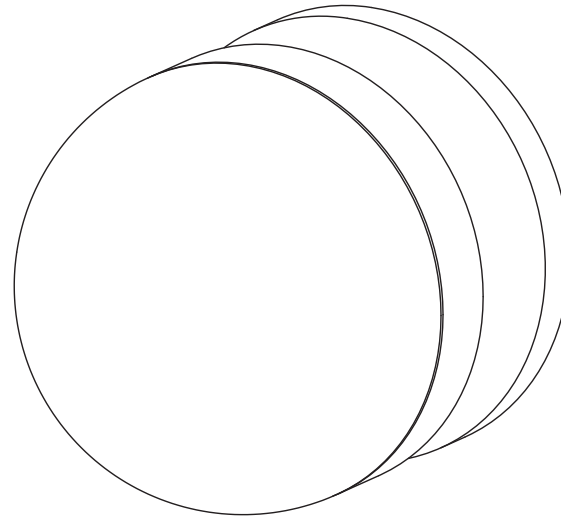

Finishes &
Materials



FAQs &
Warranty



Resources



Drill
Template

bankston.com

@bankston_architectural



Bankston Australia
14-16 Stepney Street
Stepney, South Australia 5069

P. +61 (0)8 8362 1133
E. info@bankstonarchitectural.com.au

Bankston New Zealand
P. +64 (0)6 359 0008
E. info@bankstonarchitectural.co.nz

Bankston International
E. info@bankston.com

**SDG Trading Pty Ltd trading
as Bankston Architectural**
ACN 008 154 041
ABN 18 008 154 041


*Image used for illustration
purposes only



Please recycle
me after use

1. Unbuild the product in this sequence

- 1.1 Hold the knob and outer rose (A) so neither can turn freely and unscrew inner rose (B). Figure 1.

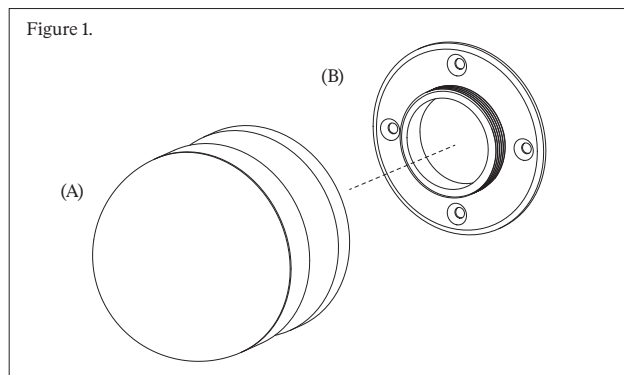


2. Install your latch, lock, or privacy mechanism.

- 2.1 Refer lock, latch, or privacy supplier instructions.
*minimum 70mm backset recommended.



3. Drilling the holes

- 3.1 Affix provided template to door and mark the pilot holes on both sides of the door. Figure 2
3.2 Drill the pilot holes from both sides of the door.
3.3 Drill the Centre spindle hole using a 22mm or 7/8 inch spade bit.

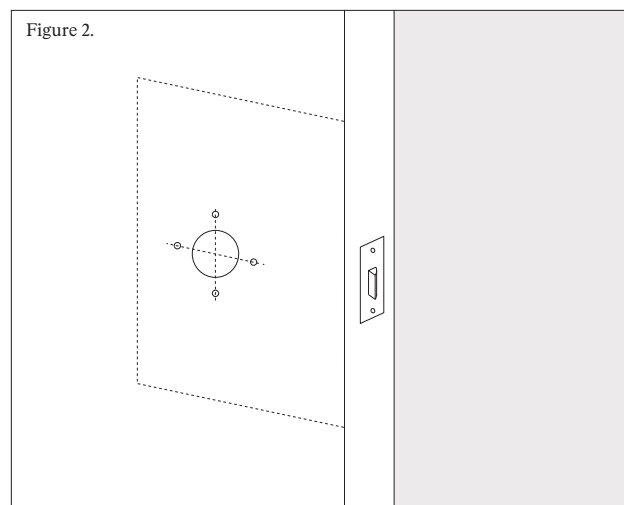


4. Fixing to the door


- 4.1 Using wood screws (H) - Figure 3 or threaded joiner bolts (F & G) - Figure 4. Attach the inner roses (B) to the door on both sides.

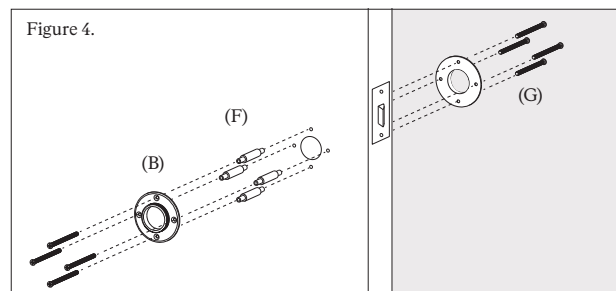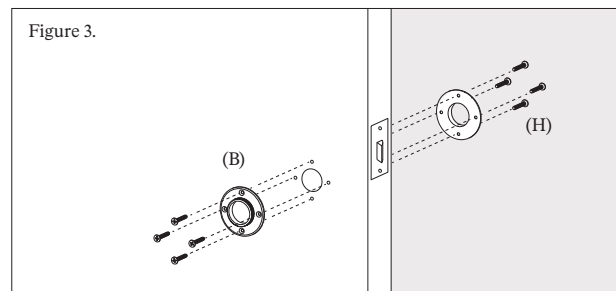

- 4.2 We recommend using a standard spindle (D,E) in most applications. Split spindles allow each lever or knob to retract independently and are supplied for use in the event that your latch is not operating smoothly as a result of misalignment during installation. Figure 5
* Ensure you have cut your spindle to required length if required

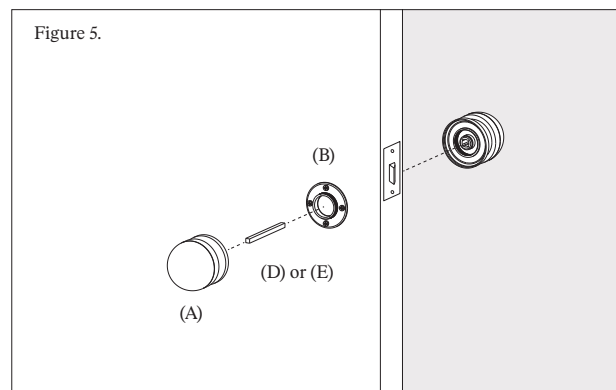

Included:

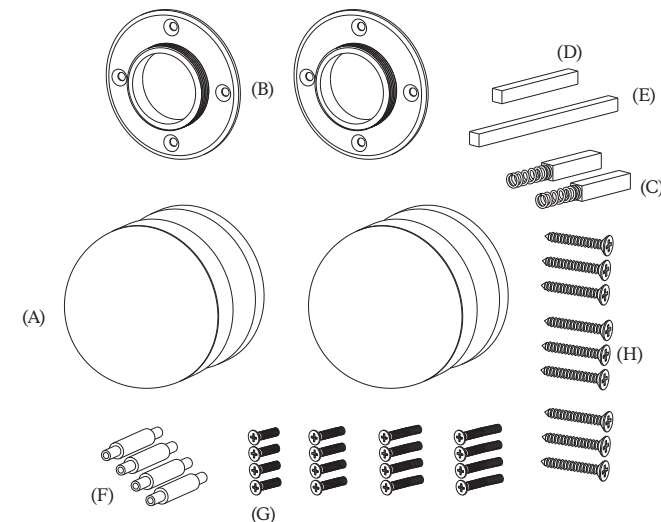

Knob on outer rose x 2 (A), inner rose x 2 (B), sprung spindle x 2 (C), spindle L100mm x 1 (D), spindle L150mm x 1 (E), threaded joiners x 4 (F), bolts x 4 sizes (G), wood screws L20mm x 9 (H).

PLEASE NOTE:

Please note that screws require pre-drilling.
Please take extra care when fitting.

IMPORTANT:

Please install this hardware in the following order to ensure its warranty is not voided.

1. Install the hardware on raw/unfinished door using the instructions provided.
2. Remove hardware (where possible) and store safely. Do not place tape onto the hardware as this will damage the finish.
3. Paint / finish door.
4. Reinstall hardware.