


H06 Sliding Door Pull

Install
Instructions

Bankston
Civilian

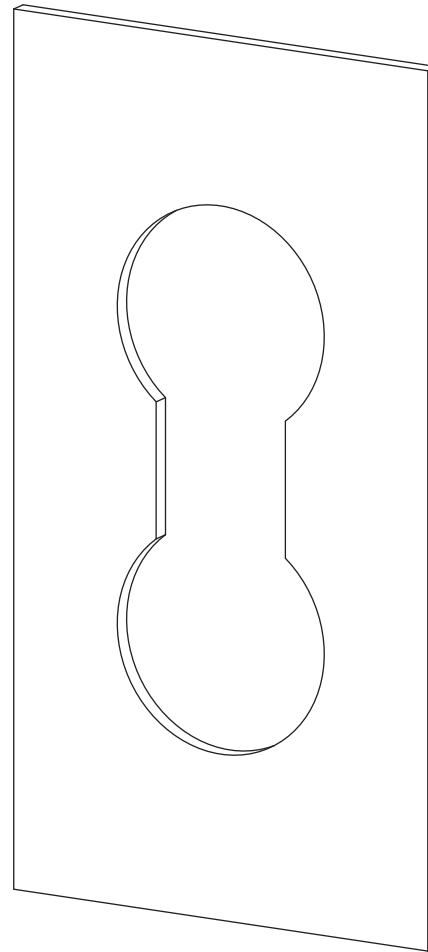

**Finishes &
Materials**



**FAQs &
Warranty**



Resources



**Drill
Template**

bankston.com

@bankston_architectural



Bankston Australia
14-16 Stepney Street
Stepney, South Australia 5069

P. +61 (0)8 8362 1133
E. info@bankstonarchitectural.com.au

Bankston New Zealand
P. +64 (0)6 359 0008
E. info@bankstonarchitectural.co.nz

Bankston International
E. info@bankston.com

**SDG Trading Pty Ltd trading
as Bankston Architectural**
ACN 008 154 041
ABN 18 008 154 041



*Image used for illustration
purposes only




**Please recycle
me after use**

1. Marking the door

- 1.1 Mark the edge of your door at the desired height and project a horizontal line using a spirit level. Figure 1.
- 1.2 Affix provided template to door (below).
- 1.3 Cut the cavity of the rectangle using your preferred method to a depth of 13mm (1/2") Figure 2.
- 1.4 Apply your preferred adhesive and fit to the door.

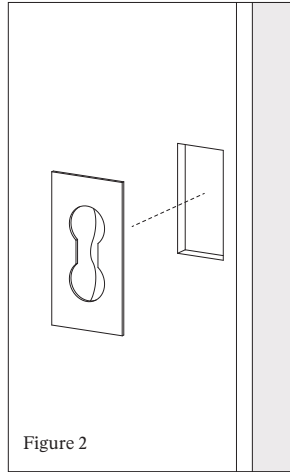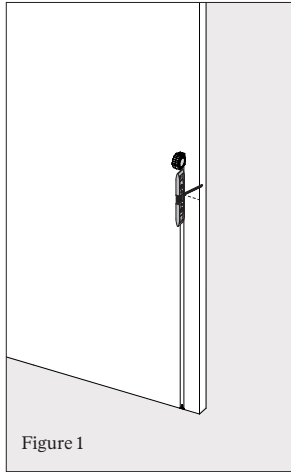

Included:

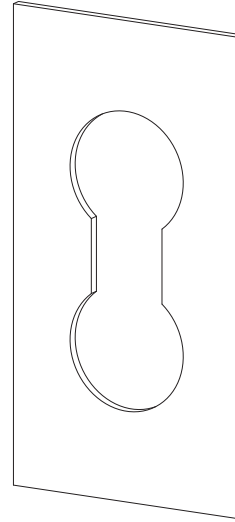

PLEASE NOTE:

Please note that screws require pre-drilling.
Please take extra care when fitting.

IMPORTANT:

Please install this hardware in the following order to ensure its warranty is not voided.

1. Install the hardware on raw/unfinished door using the instructions provided.
2. Remove hardware (where possible) and store safely. Do not place tape onto the hardware as this will damage the finish.
3. Paint / finish door.
4. Reinstall hardware.