


H09 Escutcheon

Install
Instructions

Civilian

Bankston

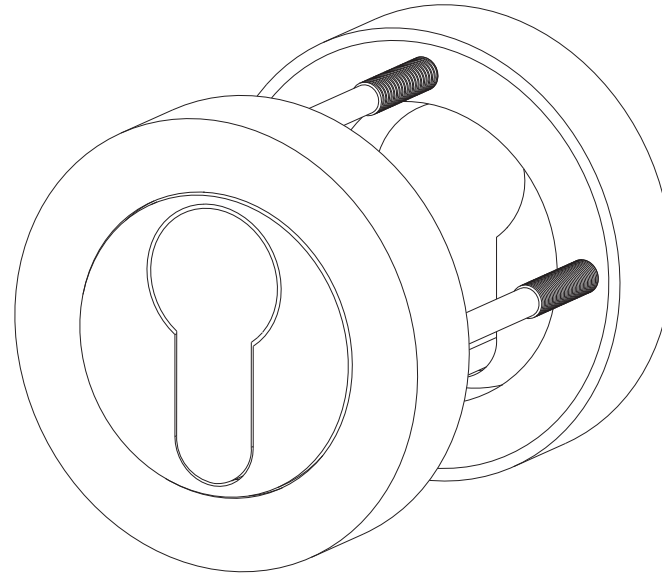

Finishes &
Materials



FAQs &
Warranty



Resources



Drill
Template

bankston.com

@bankston_architectural



Bankston Australia
14-16 Stepney Street
Stepney, South Australia 5069

P. +61 (0)8 8362 1133
E. info@bankstonarchitectural.com.au

Bankston New Zealand
P. +64 (0)6 359 0008
E. info@bankstonarchitectural.co.nz

Bankston International
E. info@bankston.com

**SDG Trading Pty Ltd trading
as Bankston Architectural**
ACN 008 154 041
ABN 18 008 154 041

*Image used for illustration
purposes only



Please recycle
me after use

1. Marking the door

- 1.1 Mark the edge of your door at the desired height of your escutcheon from the centre of the spindle hole of the door lever to the centre of the key hole. Figure 1.
- 1.2 Using a spirit level, mark the door at the desired height, continuing the line from the front of the door, around the edge and onto the back of the door. Figure 2.
- 1.3 We recommend extending the line 100mm onto each face of the door.

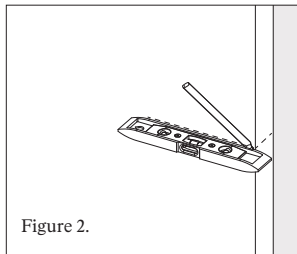


Figure 2.

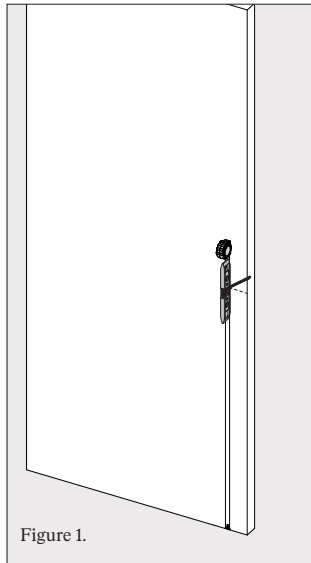


Figure 1.

2. Install mortice lock & cylinder

- 2.1 Refer supplier instructions.

3. Prepare cut-off screws

- 3.1 If using face fix timber screws, proceed to step 4.
- 3.2 If required, shorten connector bolts (C or D) to suit door thickness. Figure 3.

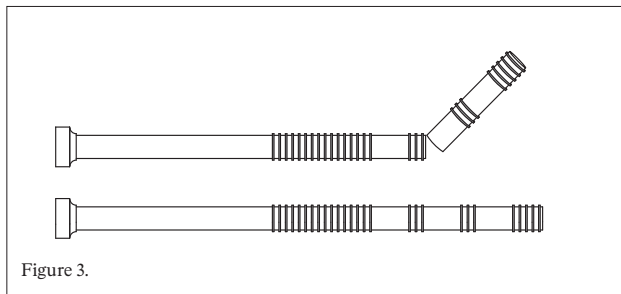


Figure 3.

- 3.3 Ensure to cut so that the bolt does not protrude from the opposite rose once installed. Figure 4.

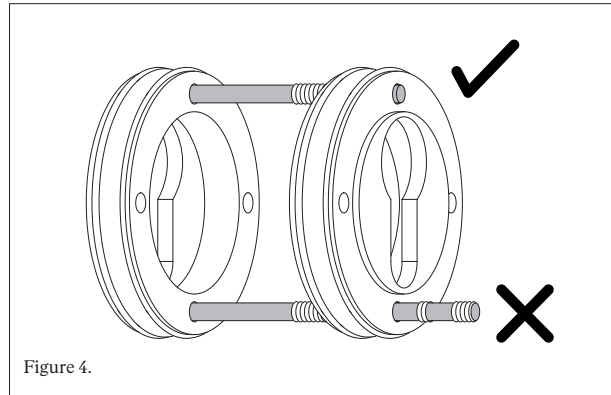


Figure 4.

4. Install escutcheon

- 4.1 Affix provided template to door and mark the pilot holes on both sides of the door.
- 4.2 Drill the pilot holes from both sides of the door.
- 4.3 Unscrew the outer roses (A) from the escutcheon inner rose (B) and place the halves on either side of the door over your Euro Cylinder (not included).

- 4.4 Insert two of the cut-off screws through non threaded holes of the escutcheon at your desired locations, feeding them through the bolt-through holes in your mortice lock and screwing them into the opposite rose, Figure 5.
- OR
- 4.5 Affix wood screws (E) at all fixing points.
- 4.6 Replace outer rose covers (A).


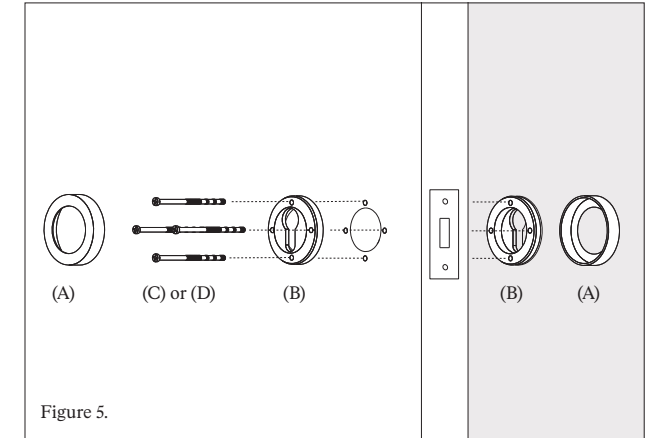


Figure 5.

Included:

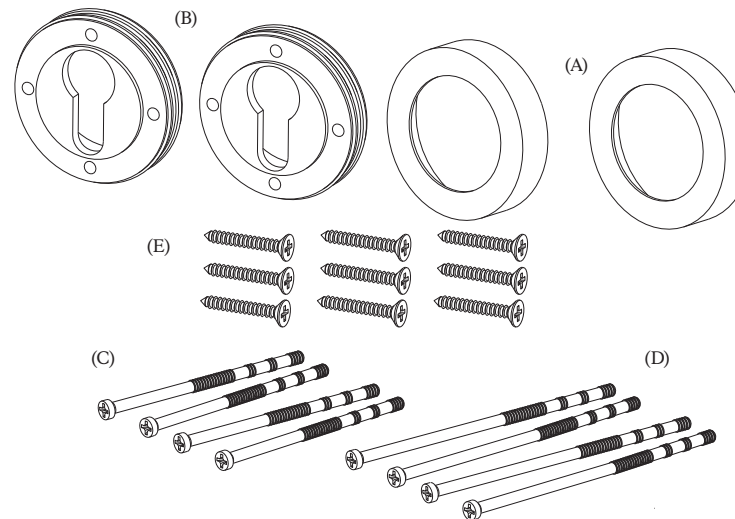

Outer rose x 2 (A), escutcheon inner rose x 2 (B), connector bolts L65mm x 4 (C), connector bolts L100mm x 4 (D), wood screws x 9 (E).

PLEASE NOTE:

Please note that screws require pre-drilling. Please take extra care when fitting.

IMPORTANT:

Please install this hardware in the following order to ensure its warranty is not voided.

1. Install the hardware on raw/ unfinished door using the instructions provided.
2. Remove hardware (where possible) and store safely. Do not place tape onto the hardware as this will damage the finish.
3. Paint / finish door.
4. Reinstall hardware.