


Pull 03

W1½ x H6⅝" | W38 x H160mm
W1⅞ x H6⅝" | W40 x H160mm

Install Instructions

Australian Design No. 202216355

Bankston
Edition Office

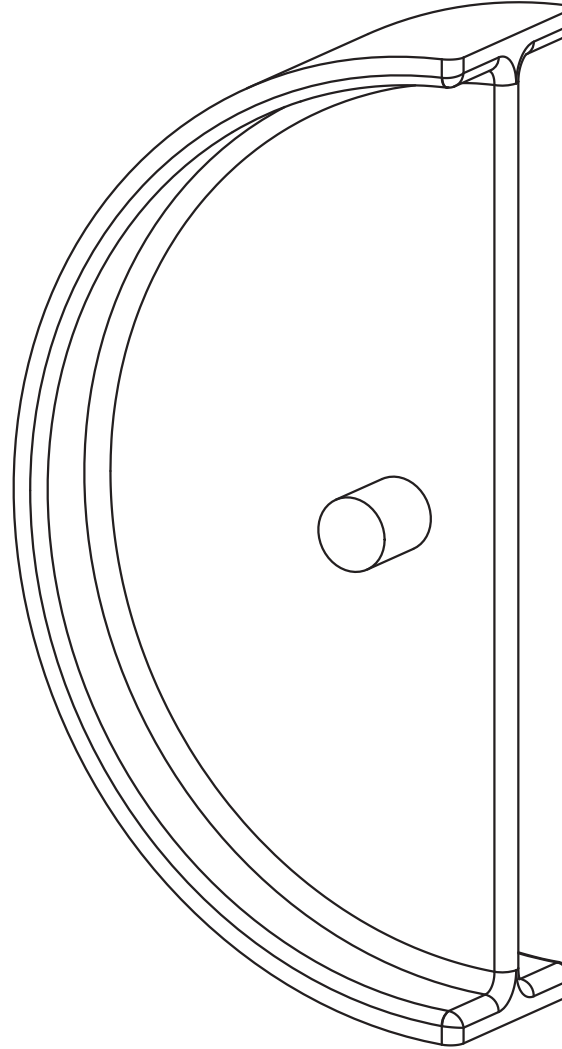

Drill
Template



Finishes &
Materials



FAQs &
Warranty



Resources

bankston.com

@bankston_architectural



Bankston Australia
14-16 Stepney Street
Stepney, South Australia 5069

P. +61 (0)8 8362 1133
E. info@bankstonarchitectural.com.au

Bankston New Zealand
P. +64 (0)6 359 0008
E. info@bankstonarchitectural.co.nz

Bankston International
E. info@bankston.com

**SDG Trading Pty Ltd trading
as Bankston Architectural**

ACN 008 154 041
ABN 18 008 154 041

*Image used for illustration
purposes only




Please recycle
me after use


1. Marking the Door

- 1.1 Mark the fixing point on the edge of your door at the desired height. (Figure 1)
- 1.2 Affix the template below on the door. (Figure 2)
- 1.3 Cut the cavity of the semi-circle using your preferred method. (Figure 3)
- 1.4 Apply your preferred adhesive and fit to cut out. (Figure 3)

Included

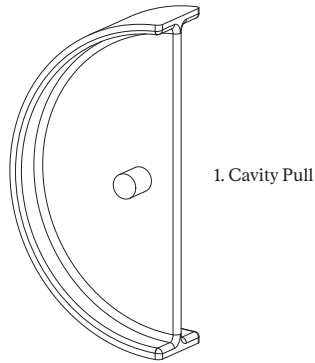

Not Included

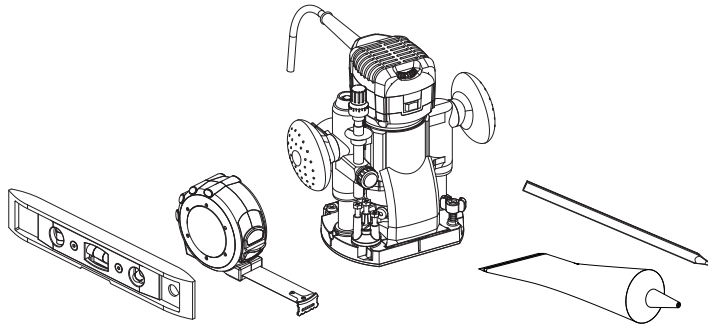

IMPORTANT

Please install this hardware in the following order to ensure its warranty is not voided.
 Install the hardware on raw/unfinished door using the instructions provided.
 Remove hardware (where possible) and store safely. Do not place tape onto the hardware
 as this will damage the finish.
 Paint / finish door.
 Reinstall hardware.

