


Hook

D³¹/₃₂X P3³/₁₆" | D25 x P78mm

Install Instructions

Australian Design No. 202216353

Bankston
Edition Office

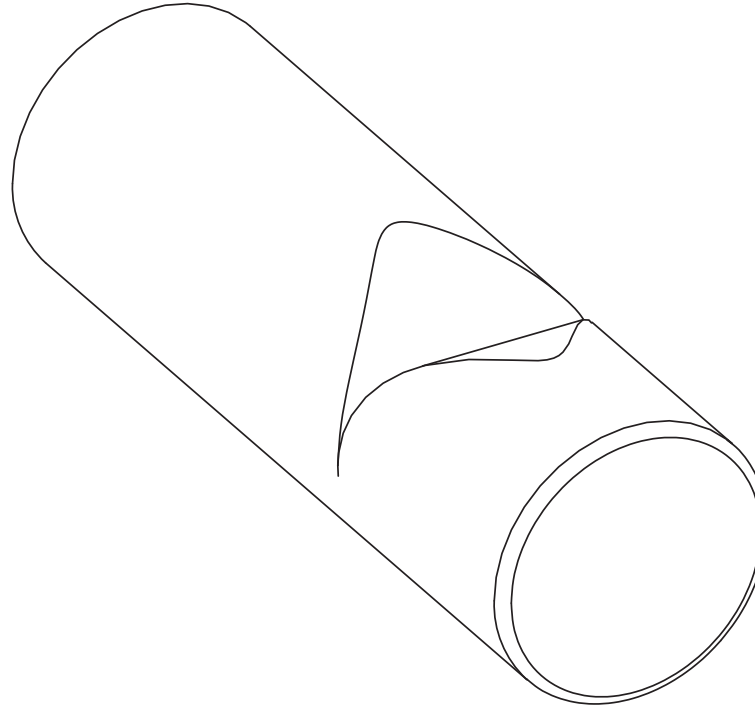

Finishes &
Materials



FAQs &
Warranty



Resources

bankston.com

@bankston_architectural



Bankston Australia
14-16 Stepney Street
Stepney, South Australia 5069

P. +61 (0)8 8362 1133
E. info@bankstonarchitectural.com.au

Bankston New Zealand
P. +64 (0)6 359 0008
E. info@bankstonarchitectural.co.nz

Bankston International
E. info@bankston.com

**SDG Trading Pty Ltd trading
as Bankston Architectural**

ACN 008 154 041
ABN 18 008 154 041

*Image used for illustration
purposes only



Please recycle
me after use

1. Installing the Hook

- 1.1 Mark your selected place of installation. (Figure 1)
- 1.2 Remove the pencil spindle from the hook by loosening the grub screw. (Figure 2)
- 1.3 Drill appropriate sized pilot hole for the wood screw at your selected install point.
- 1.4 Fit pencil spindle using wood screw provided. (Figure 3)
- 1.5 Place hook on pencil spindle and tighten the grub screw to secure.

IMPORTANT

Please install this hardware in the following order to ensure its warranty is not voided.

Install the hardware on raw/unfinished door/drawer using the instructions provided.

Remove hardware (where possible) and store safely. Do not place tape onto the hardware as this will damage the finish.

Paint / finish door.

Reinstall hardware.

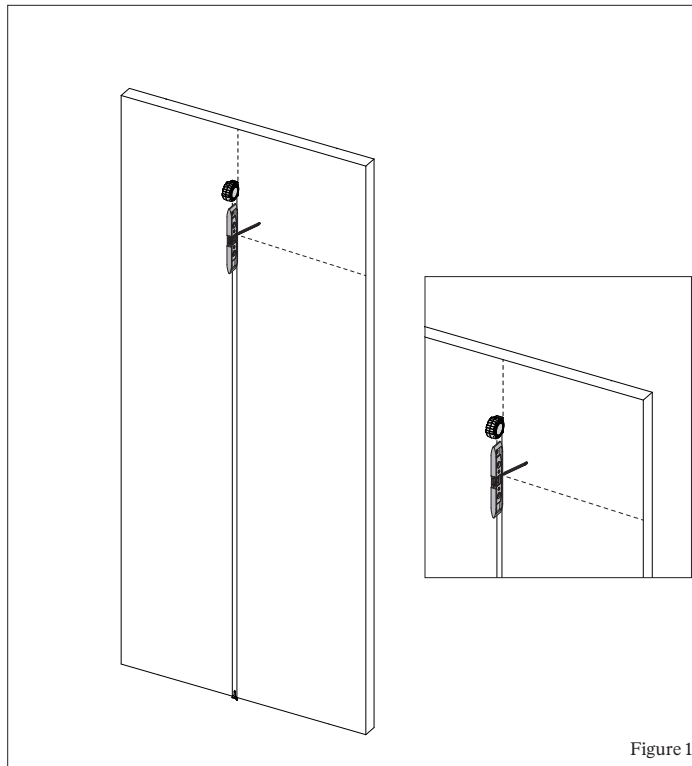


Figure 1


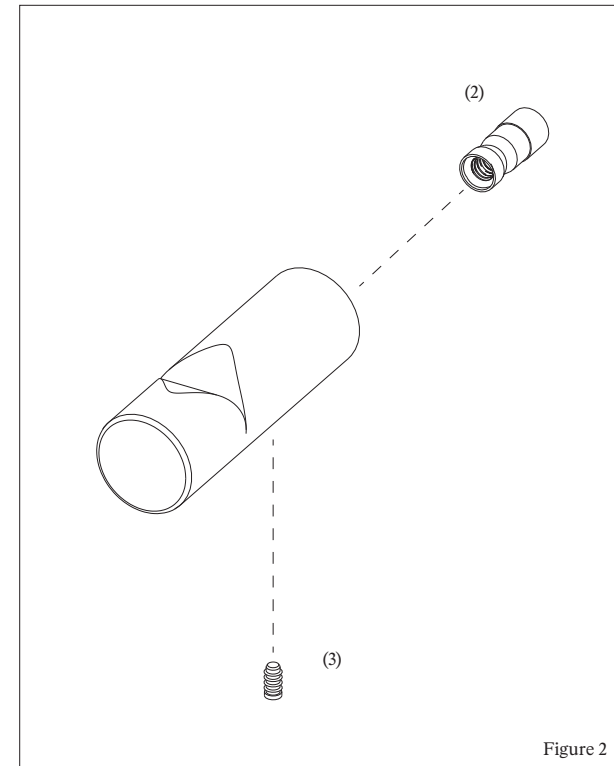


Figure 2

Included

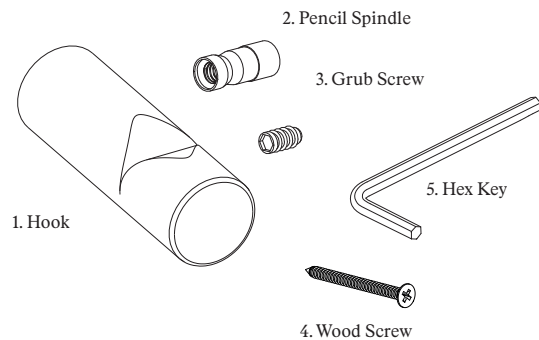

Not Included

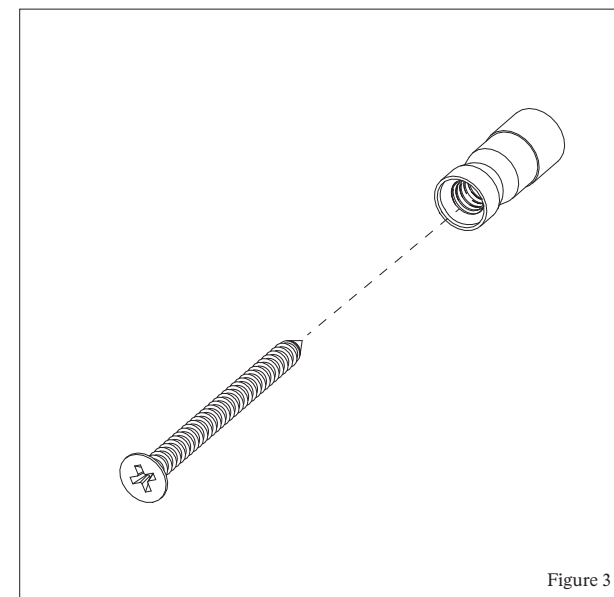
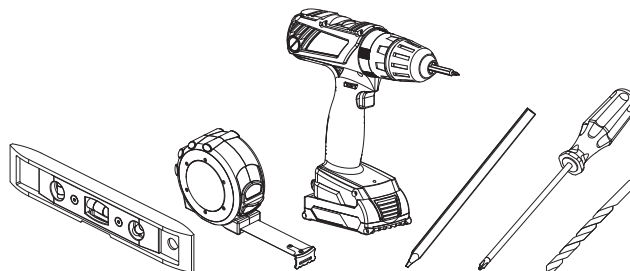


Figure 3