


Pull 04

L7 $\frac{7}{8}$ x H2 $\frac{3}{8}$ " | L200 x H60mm

Install Instructions

Bankston Edition Office

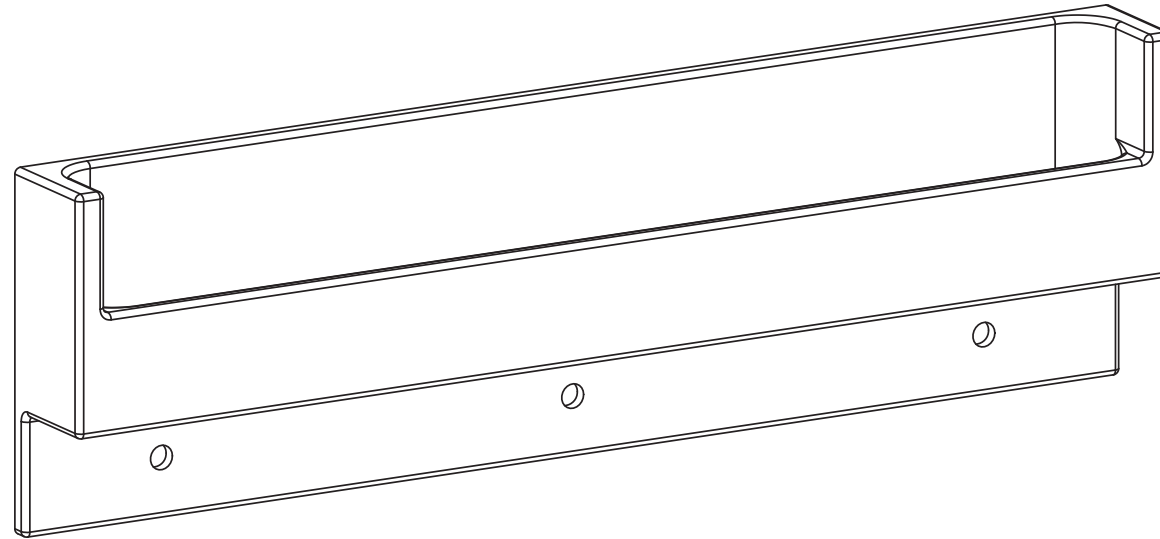

Drill
Template



Finishes &
Materials



FAQs &
Warranty



Resources

bankston.com

@bankston_architectural



Bankston Australia
14-16 Stepney Street
Stepney, South Australia 5069

P. +61 (0)8 8362 1133
E. info@bankstonarchitectural.com.au

Bankston New Zealand
P. +64 (0)6 359 0008
E. info@bankstonarchitectural.co.nz

Bankston International
E. info@bankston.com

**SDG Trading Pty Ltd trading
as Bankston Architectural**

ACN 008 154 041
ABN 18 008 154 041

*Image used for illustration
purposes only



Please recycle
me after use

1. Select the place of installation. (Figure 1)
2. Affix the template below inside the drawer. (Figure 2)
3. Cut and remove the area indicated using your preferred method. If door / drawer thickness is more than 17mm you will need to recess the back of the drawer so the front will finish flush with the face. (Figure 3)
4. Drill appropriate sized pilot holes and fit screws from the inside of the drawer, ensuring you do not drill through the face of the drawer. (Figure 4)

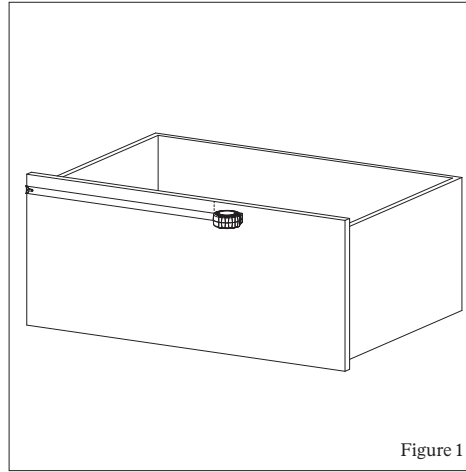


Figure 1

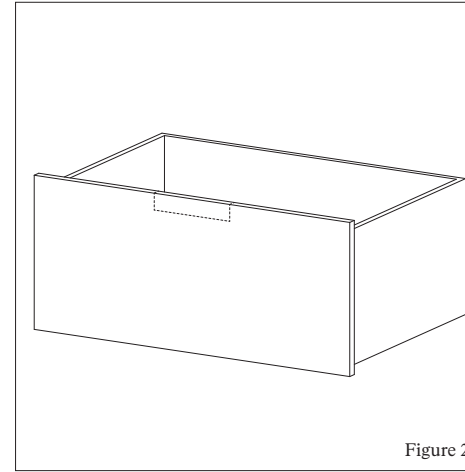


Figure 2

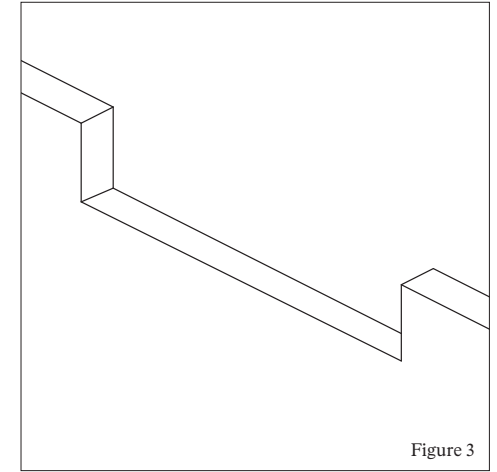


Figure 3

Inside of drawer pictured

IMPORTANT

Please install this hardware in the following order to ensure its warranty is not voided.

Install the hardware on raw/unfinished door/drawer using the instructions provided.

Remove hardware (where possible) and store safely. Do not place tape onto the hardware as this will damage the finish.

Paint / finish door.

Reinstall hardware.

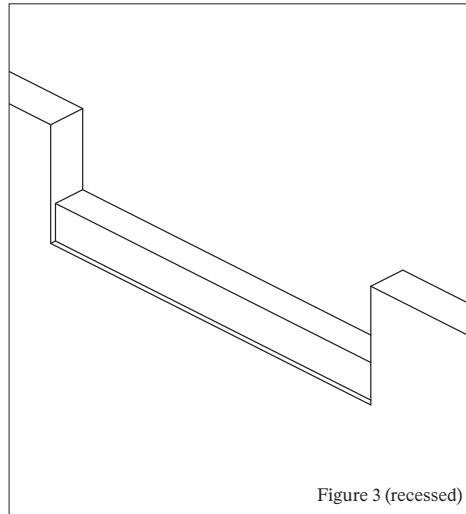


Figure 3 (recessed)

Inside of drawer pictured (Drawer thickness greater than 17mm)


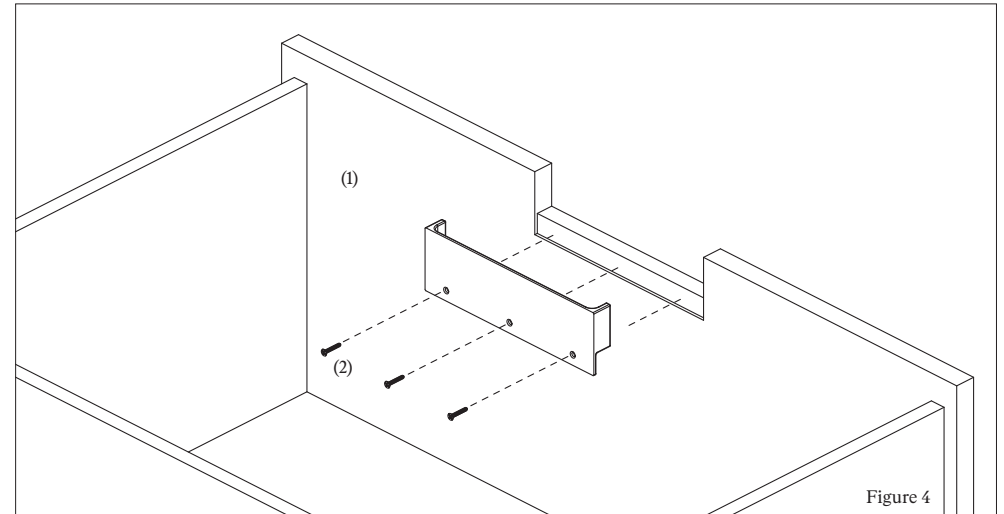


Figure 4

For number references please refer to included items next page.


Included

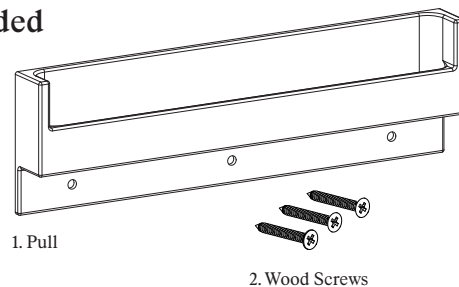

1. Pull

2. Wood Screws

Not Included

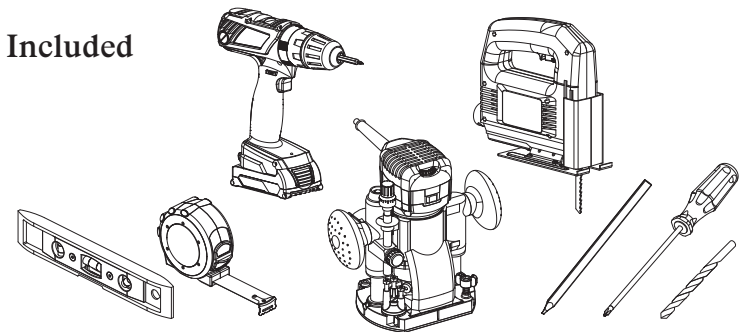

Dimensions

