


Snib

D<sup>31/32</sup> x P1<sup>1/32</sup>" | D25 x P29.7mm

## Install Instructions

Australian Design No. 202216354

Bankston  
Edition Office

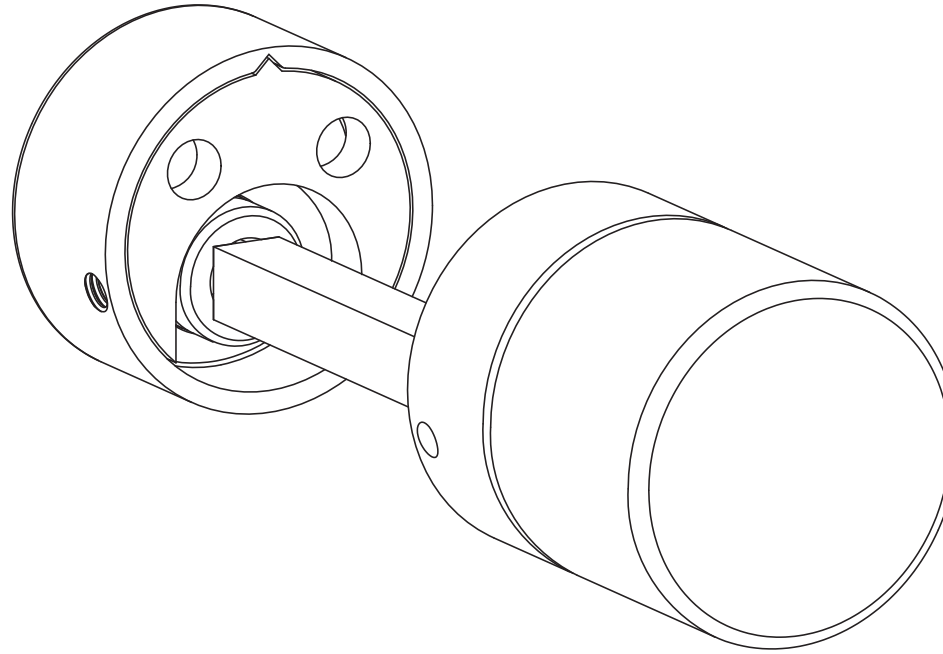

Drill  
Template



Finishes &  
Materials



FAQs &  
Warranty



Resources

**bankston.com**

**@bankston\_architectural**



**Bankston Australia**  
14-16 Stepney Street  
Stepney, South Australia 5069

P. +61 (0)8 8362 1133  
E. [info@bankstonarchitectural.com.au](mailto:info@bankstonarchitectural.com.au)

**Bankston New Zealand**  
P. +64 (0)6 359 0008  
E. [info@bankstonarchitectural.co.nz](mailto:info@bankstonarchitectural.co.nz)

**Bankston International**  
E. [info@bankston.com](mailto:info@bankston.com)

**SDG Trading Pty Ltd trading  
as Bankston Architectural**

ACN 008 154 041  
ABN 18 008 154 041

\*Image used for illustration  
purposes only





Please recycle  
me after use

## 1. Marking the Door

- 1.1 Select the place of installation, this will be relevant to the location of the installed door lever. (Figure 1)
- 1.2 Affix the template in the marked location, see drill template below. (Figure 2)

## 2. Installing Snib

- 2.1 Drill a 7.5mm hole from each side of the door to prevent the wood splitting to accommodate snib spindle. (Figure 2)
- 2.2 Drill pilot holes to the appropriate depth for the wood screws from both sides of the door. (Figure 3)
- 2.3 Install the base plates onto both side of the door using screws provided. (Figure 3)
- 2.4 Check spindle length and cut if necessary.
- 2.5 Install privacy and emergency release using grub screws and tighten with supplied Hex key. (Figure 4)

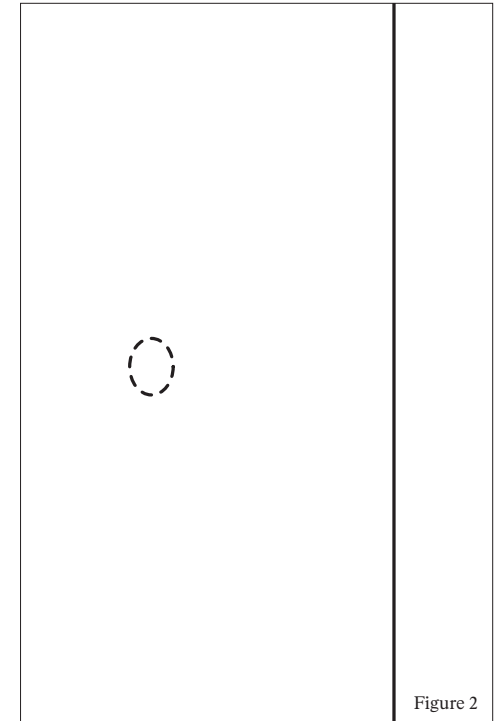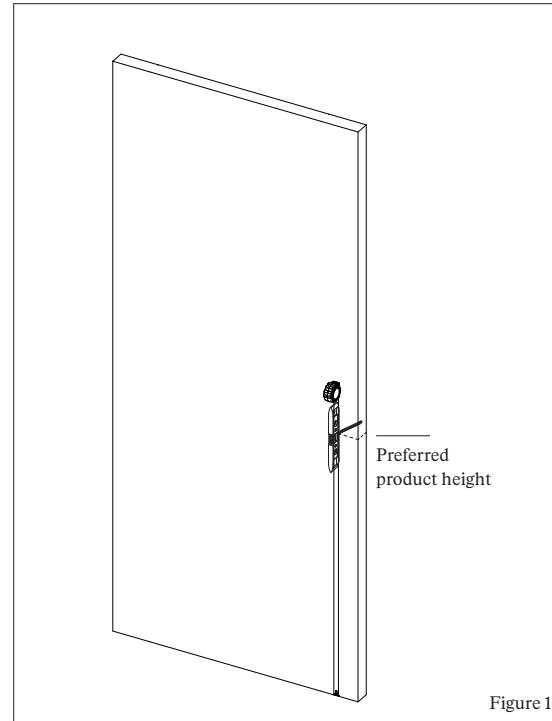

### PLEASE NOTE

The screws provided with Bankston products are made from solid brass. This allows finishes to be matched as closely as possible and prevents the possibility of screws rusting in coastal areas. Please note that screws require pre-drilling.

Please take extra care when fitting.

### IMPORTANT



Please install this hardware in the following order to ensure its warranty is not voided.

Install the hardware on raw/unfinished door using the instructions provided.

Remove hardware (where possible) and store safely. Do not place tape onto the hardware as this will damage the finish.


Paint / finish door.

Reinstall hardware.

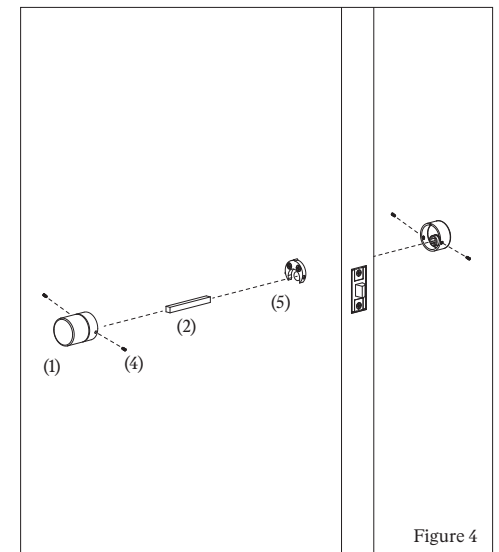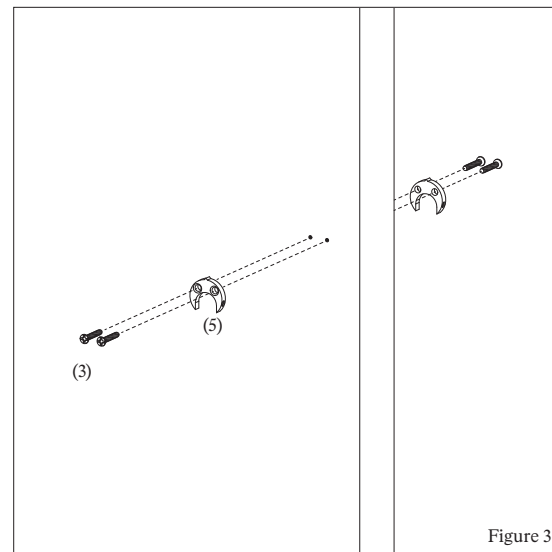


For number references please refer to included items on next page

Exploded Diagram

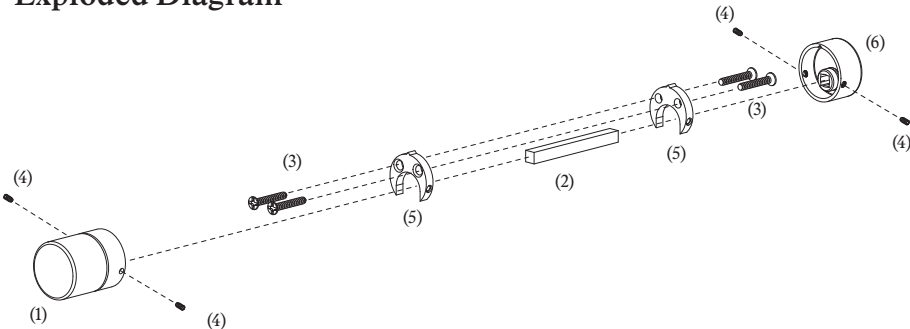

Included

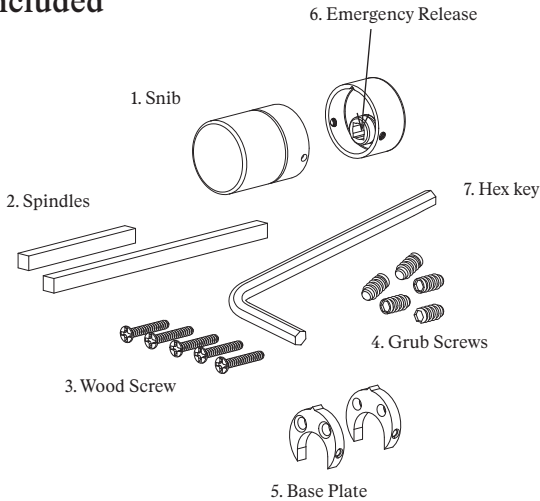

Not Included

